


RIDING MOWER GRASS CATCHER

PART NO. 1072

ASSEMBLY INSTRUCTIONS


1

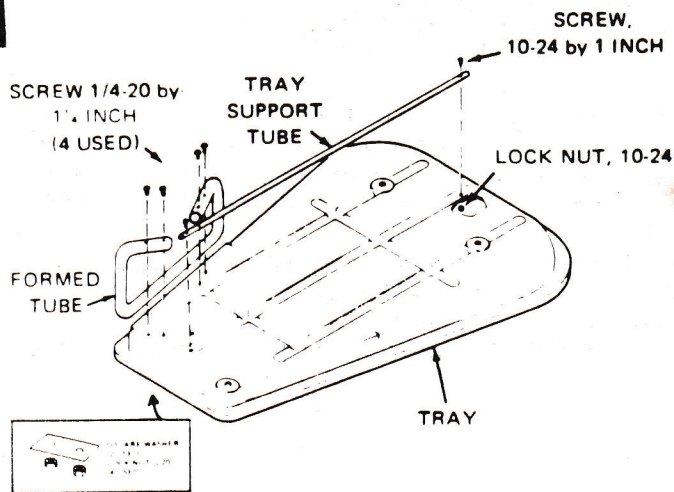

Place cart tray upside down on convenient work surface. Attach both ends of tray support tube to tray with 10-24 by 1-inch truss head screws and Lock nuts.


Place formed tube at notched side of tray. Align holes in tube and tray. Place four 1/4"-20x1 1/4" screws thru tube holes corresponding holes in tray. Turn tray over. Place square washers over threaded ends of screws. Attach whole assembly with Lock nuts.

2

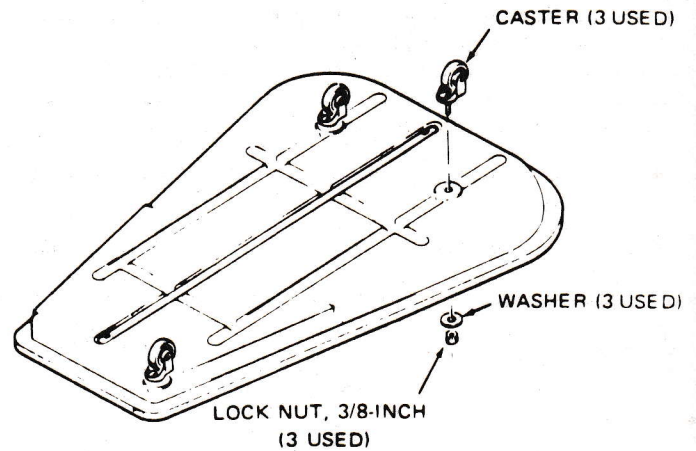

Place shafts of all casters through holes as shown. Turn tray over and attach casters securely to tray with washers under the 3/8-inch Lock nuts.

3

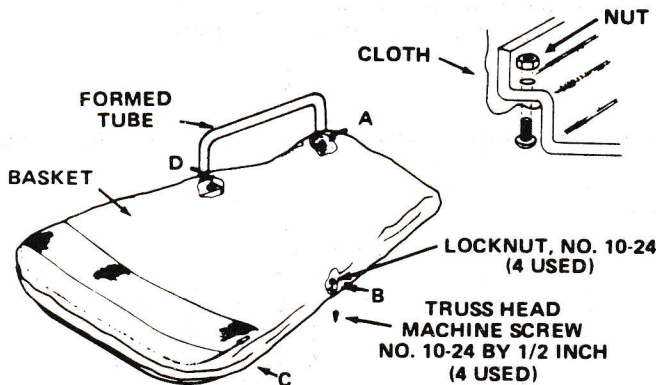


With support wires flat (and three loops in wires pointing downward) place Basket on tray so notched opening of basket is aligned with notch in edge of tray. Slip front end of basket under lip of tray and secure grommet at A to tray with one No. 10-24 by 1/2 inch Truss Head Machine Screw and one No. 10-24 Locknut.

Stretch basket tightly around outboard edge of tray, beneath lip, and install second No. 10-24 by 1/2 inch Truss Head Machine Screw and Keps nut through grommet and tray at B and C.


Stretch basket around remainder of tray and install fourth Screw and Locknut through grommet and tray at D.

4

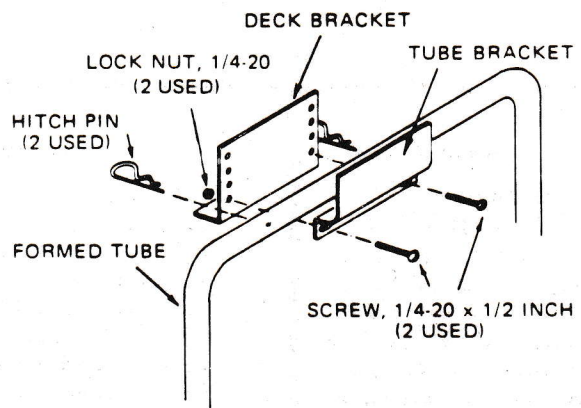

Attach tube bracket to deck bracket in bottom hole with two 1/4-20 by 1/2-inch truss head screws and 1/4-20 Lock nuts. Do not tighten nuts.


Install two hitch pins in tube as illustrated. Place formed tube between tube bracket and deck bracket.

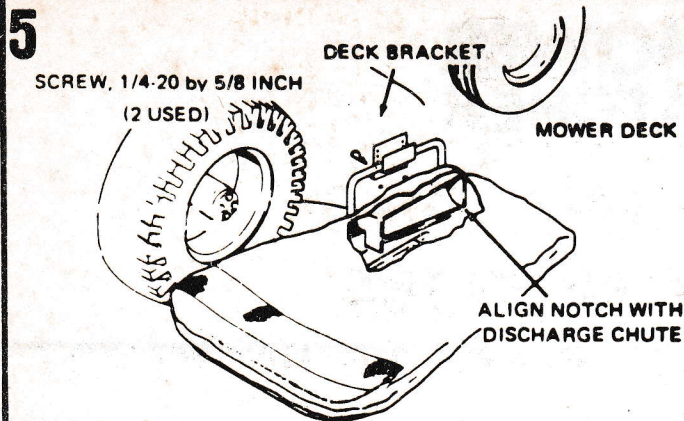

Place assembled tray, basket, and deck bracket against side of mower so front edge of notch in tray is aligned with front of mower discharge chute. Set deck bracket on mower deck and scribe marks on deck for two holes required to mount bracket. Center-punch marks and drill two 1/4-inch holes through deck.


NOTE: Mower deck may already contain suitable mounting holes.

Attach bracket to deck with two 1/4-20 by 1/2-inch truss head screws and Lock nuts.

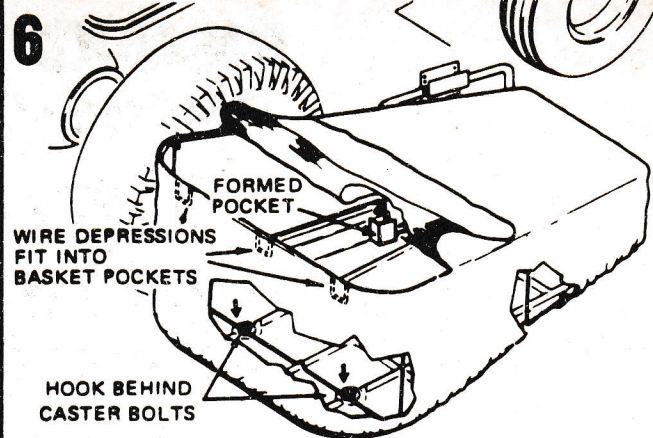

Unzip end of basket. Pull rear support wire back and hook behind attaching bolts on casters. Make sure depressed parts of top wire slide into pockets provided in cloth basket. Raise front of basket by pivoting side support wires down and hooking between sides of tray and formed pocket and bolts. Close zipper.

Check to see that front of tray at discharge opening is well clear of ground. If necessary, adjust height by attaching tube bracket to different holes in deck bracket.

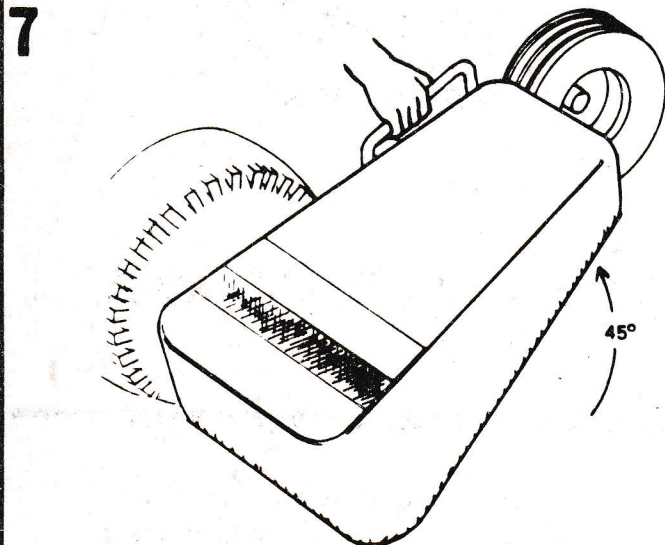

To empty the basket, lift the formed tube out of the deck bracket. Remove the entire catcher assembly, open the zippered end of the basket, and dump out clippings.

In heavy grass you may lift catcher in same manner to shake clippings to rear of catcher.

OPERATING RECOMMENDATION

Always stop the engine before removing the grass catcher. Do not restart the engine until the grass catcher has been put back on the mower in its proper place. Do not make any adjustment to the grass catcher assembly while the blade is revolving.

1072 Parts List

1071 Tray	1 ea.	Assy. Parts	
1071 Basket	1 ea.	No. 11 Hitch pin	2 ea.
1071 Support wire assy.	1 ea.	1/4"-20x1/2" THMS	4 ea.
Top wire	1 ea.	1/4"-20 Lock Nuts	5 ea.
Rear Support wire	1 ea.	1/4"-20x1-1/4" THMS	9 ea.
Front Support wire	2 ea.	10-24x1" THMS	2 ea.
Casters 3/8-16x1-1/2" stem	3 ea.	3/8 - 16 Lock nut	3 ea.
Fender Washer 1-5/8 O.D. .392 hole	3 ea.	10-24x1/2" THMS	4 ea.
Tray Support tube	1 ea.	10-24 Lock nuts	6 ea.
Formed tube	1 ea.	1"x2-3/4" 20 ga. Sq. washer	2 ea.
Deck Bracket	1 ea.	Instruction sheet #1072	1 ea.
Tube holder Bkt.	1 ea.		

MINNESOTA LAWN PRODUCTS