


# **GRAVELY**

## **ATTACHMENT CLUTCH CONTROL**

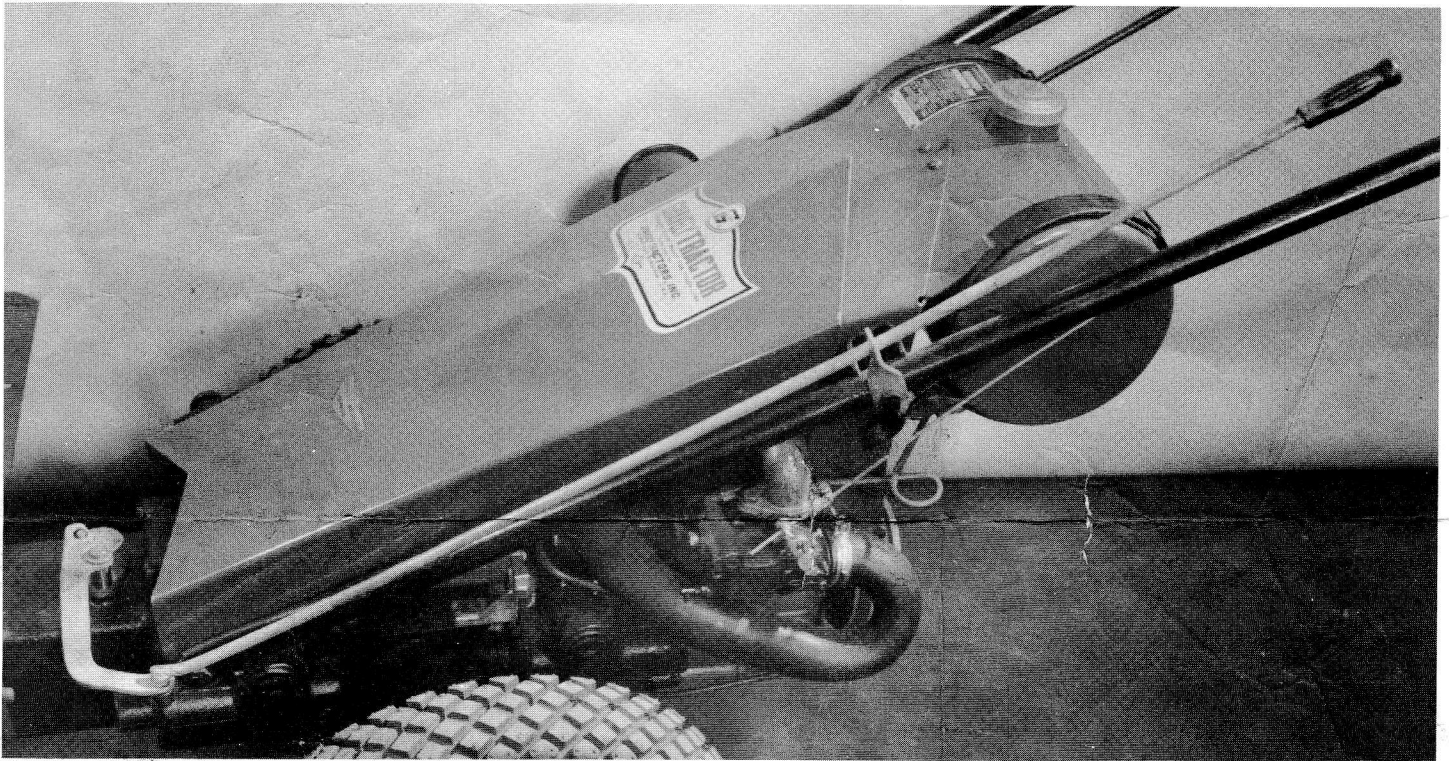


### **NOW--ATTACHMENTS ENGAGED AND DISENGAGED QUICKLY AND EASILY!**

Whether you walk behind the Tractor or ride on a Sulky, you can now engage and disengage the Attachment with one quick motion...even while the Tractor is moving!

Simple, strong, and safe, the Attachment Clutch Control makes using the Gravelly Tractor even more convenient, more efficient.

You can install the Kit yourself in a few minutes. The Kit itself is inexpensive, less than \$5.00 in most states.



Find out for yourself how much more enjoyment you will receive from using your Gravelly Equipment with this optional accessory. See your Gravelly Representative today!

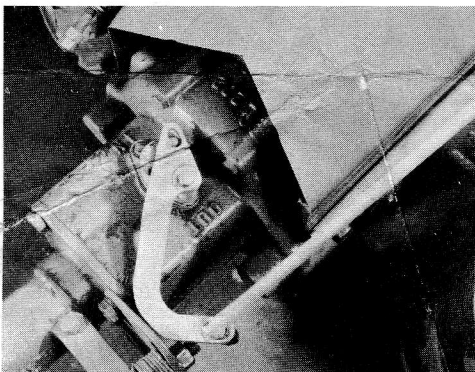

**PUSH and Attachment  
Clutch is *DISENGAGED***



 **PULL and Attachment  
Clutch is *ENGAGED***

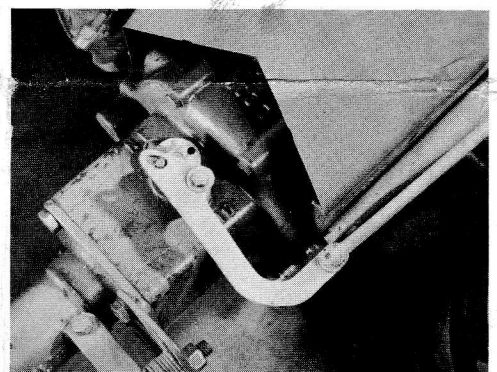

**EASY!**

**GRAVELY TRACTORS, INC., DUNBAR, WEST VIRGINIA**

# GRAVELY ATTACHMENT CLUTCH HANDLE

## ILLUSTRATED PARTS and PRICE LIST      EFFECTIVE: Nov. 1, 1959

Prices Subject to Change Without Notice


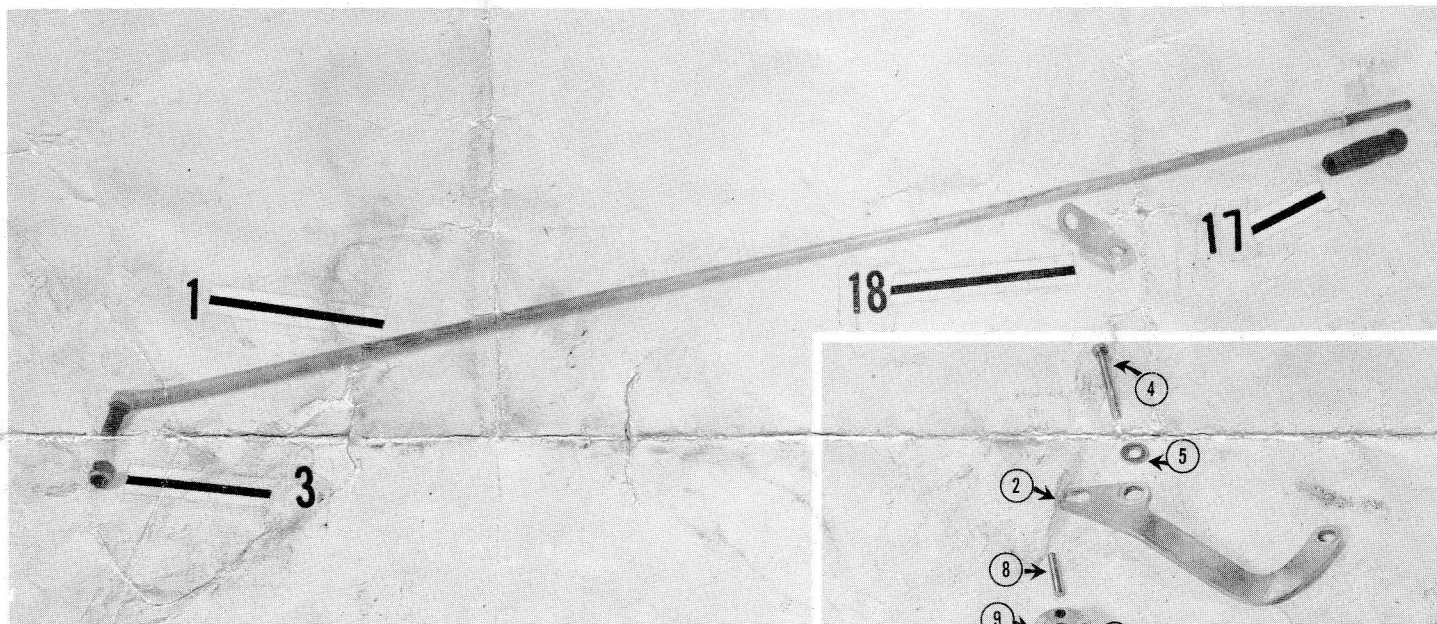


Photo No.	Part No.	Description	List Price
1	1	L-130 Shifter Rod	\$1.05
2	1	L-129 Shifter Arm	1.05
3	1	243-N Shifter Rod Nut	.13
4	1	166-S Spacer Bolt	.04
5	1	401-W Spacer Flat Washer	.01
6	1	L-128 Spacer	.25
7	1	242-N Spacer Bolt Nut	.06
8	1	L-124 Shifter Dowel	.13
9	1	L-127 Shifter Body	.95
10	1	801-A Shifter Shaft Set Screw	.18
11	1	L-132 Spring	.14
12	*		
13	*		
14	*		
15	*		
16	*		
17	1	5167 Grip	.25
18	1	L-131 Shifter Rod Bracket	.46

\*Standard on Tractor. Not furnished with Kit.

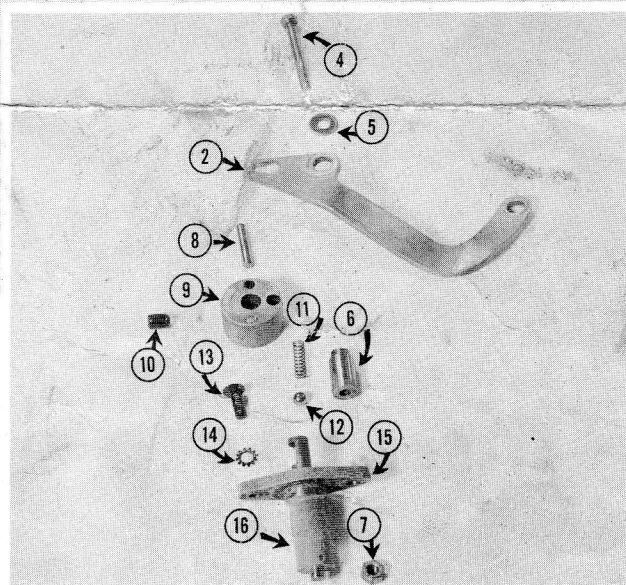

### ASSEMBLY INSTRUCTIONS

Remove Locator Body and replace with L-127 Shifter Body, ~~using Spring and Ball from Old Locator Body~~ See Below \*\*

Be sure Spring and Ball are in position. Assemble to Shipper Shaft and Guide. This sub assembly must then be locked in place with Set Screw.

Insert Dowel Pin in L-127 Shifter Body. Replace Unit in Tractor. Fasten to Advance Casting on right side (viewed from Tractor Handles), with Bolt and Nut previously removed.

Place L-128 Spacer over Bolt hole, with machined "shoulder" up. Place Slot in L-129 Shifter Arm over Dowel, and drilled hole over the Spacer, with bend in the Shifter Arm down, and end pointing to the rear of the Tractor. See illustration on back.

Fasten with Bolt, Washer and elastic stop Nut provided. The Bolt screws through the Advance Casting, the Nut is placed on the end of the Bolt inside the Advance Casting, and locked firmly in place.

Fasten Shifter Rod Bracket to Handle Bolt, assemble Shifter Rod through large hole in Shifter Rod Bracket assemble threaded end of Shifter Rod to Shifter Arm and secure with 243-N Nut.

Slip Grip in place. Pulling Rod engages Attachment. Pushing Rod disengages.

**GRAVELY TRACTORS, INC.,      DUNBAR, WEST VIRGINIA**

\*\* USING NEW L-132 SPRING FOR INCREASED TENSION, AND BALL FROM OLD LOCATOR BODY.