

To continue its program of quality and design improvement, the manufacturer reserves the right to change specifications, design or prices without notice and without incurring obligation.

SET-UP AND PRE-DELIVERY 408 Form No. 20881L2 Effective Date: 9-1-74

- 1. Remove carton top and sides. Cut straps securing tractor to pallet. Cut strapping and remove all loose parts and packing material from tractor. CAUTION: Straps are under tension, use care in cutting.
- 2. Remove cover plate, battery plate, and battery from tractor. Service battery according to instructions packed with unit. While battery is being charged, continue set up.
- 3. Raise rear of tractor with jack or hoist. Remove E-ring and masking tape from axle. Coat the axle with general purpose grease. After the wheels are installed, remove any excess grease. Position key in place and slide wheel, valve stem in, on axle over key. Secure with E-ring. Repeat for other side. Lower tractor remove jack or hoist.
- 4. Raise front of tractor with jack or hoist. Remove bolt and washer from spindle. Slide wheel on, valve stem in. Secure in place with bolt and washer. Lower tractor, remove jack or hoist.
- 5. Slide steering wheel in position on steering shaft, secure with bolt and locknut.
- 6. Fill transmission to full level with SAE 30W SC oil. Capacity is 3 US quarts (2.8 liters).
- 7. Fill engine to full level with SAE 30 or SAE 5W20 API classification SC or SD (MS) oil depending upon the season. Capacity is 2½ U.S. pints.
- 8. Reinstall battery in place with holddown. Attach cables to battery terminals. The ground cable attaches to the negative (-or NEG) terminal. See Owner's Manual. Reinstall cover plate and battery plate.

Lubricate all fittings with general purpose grease.

Front Wheels - 2 Spindles - 2 Axle Pivot - 1 PTO arm - 2 Belt Idler Pulley Arm - 1 Steering Gear Support - 1

- 10. Lightly oil all pivot points of linkage particularly support areas of the clutch and brake shafts.
- 11. Check air pressure of tires front 12 psi, rear 6 psi.
- 12. Check operation of tractor, check clutch and PTO adjustment. See Owner's Manual.



One Gravely Lane Clemmons, N. C. 27012

Printed in U.S.A.