

To continue its program of quality and design improvement, the manufacturer reserves the right to change specifications, design or prices without notice and without incurring obligation

Operating Instructions

OPERATING INSTRUCTIONS 15600E1 CART

I. Assembly Instructions:

Separate Assembly Instructions are packed with the cart.

II. Illustrated Parts List

Separate Illustrated Parts List are packed with the cart.

III. Mounting:

Convertible 7.6

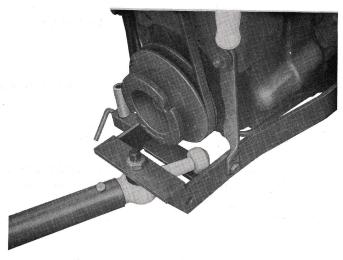


Figure 1

Requires 14688E1 Roller Rest Kit. See the instructions packed with the Roller Rest Kit.

Commercial 10A

Commercial 12

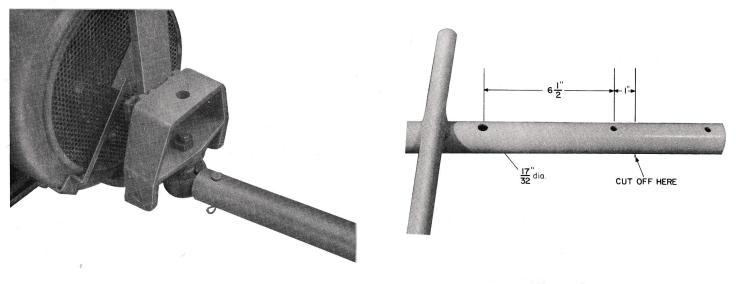


Figure 2 Figure 3

Requires 11627E1 Trailing Hitch Kit and 11980E1 Coupler Strut Weldment

- 1. Cut off cart drawbar as shown in Figure 3.
- 2. Drill a 17/32 inch diameter hole, as shown in Figure 3, 6-1/2 inches from the 11/32 hole.
- 3. Attach the cart to the tractor using the trailing hitch kit.
- 4. Attach the coupler strut weldment to the cart drawbar using the 1/2" x 3-1/4" bolt and locknut. Secure the coupler strut weldment to the tractor hitch using the clevis pin and cotter pin.

IV. Lubrication

Kit.

Wheels - Upon assembly and every 4 hours grease liberally with general purpose grease.

Lightly oil the cart latch for easier operation.

V. Operation

The cart can be used to haul virtually anything. It has a capacity of approximately 1000 pounds.

Use care when operating the tractor and cart, especially when backing.



One Gravely Lane Clemmons, N. C. 27012 Form No. 19698P1 (6-72) Printed in U. S. A.