



A DIVISION OF CLARKE-GRAVELY CORPORATION

To continue its program of quality and design improvement, the manufacturer reserves the right to change specifications, design or prices without notice and without incurring obligation.

OPERATING INSTRUCTIONS

15589E1 Riding Sulky

Form No: 20045L2

Effective Date: 4-1-73

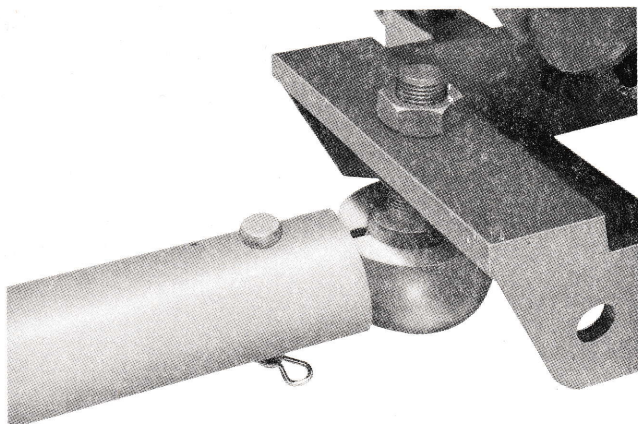


Figure 1

Figure 1 shows the Riding Sulky mounted on the Convertible 7.6 tractor. Figure 2 shows the Riding Sulky mounted on the Commercial 8, Commercial 10A, or Commercial 12 tractor.

MOUNTING:

Commercial 8, Commercial 10A, Commercial 12: Cut 5 inches off sulky frame. Drill a $11/32$ inch diameter hole down through the frame one inch from end. Attach to the tractor using the Trailing Hitch Kit.

Convertible 7.6: The Riding Sulky attaches to the tractor using the Trailing Hitch Kit.

LUBRICATION:

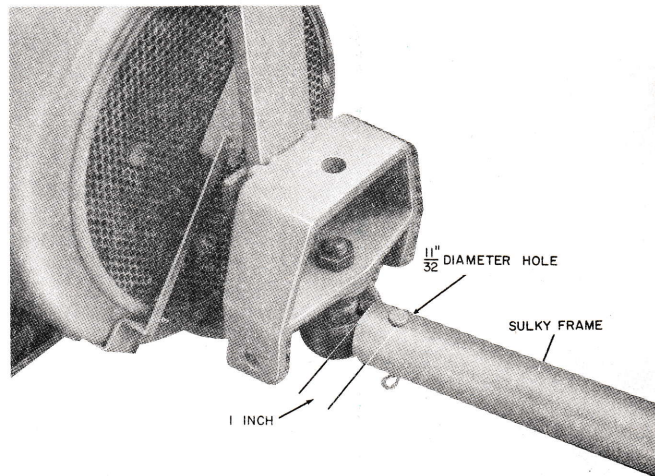


Figure 2

Upon assembly and every 8 hours, grease the wheels with general purpose grease.

OPERATION:

The Riding Sulky allows the tractor operator to ride rather than walk.

SAFETY FIRST:

1. For slopes, terraces and uneven terrain, disconnect the sulky.
2. Use extreme care when turning or backing up.
3. Always reduce speed in sharp turns.
4. Always keep a firm grip on handle bars.



One Gravelly Lane
Clemmons, N. C. 27012

Printed in U. S. A.