& GRAVELY CORPORATION

To continue its program of quality and design improvement, the manufacturer reserves the right to change specifications, de sign of prices without notice and without incurring obligation OPERATING INSTRUCTIONS 15590E1 Steering Sulky Form No: 20194L2

Effective Date: 5-15-73

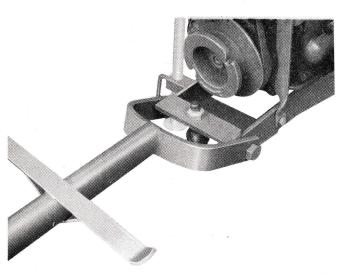


Figure 1

Figure 1 shows the steering sulky mounted on the Convertible 7.6 tractor. Figure 2 shows the steering sulky mounted on the Commercial 8, Commercial 10A or Commercial 12 tractor.

MOUNTING:

The sulky chassis weldment attaches to each side of the rear hitch of the tractor. It is secured in place by installing the hitch bolt through the sulky chassis weldment and the hitch of the tractor. Place a flatwasher on the hitch bolt, and secure in place using a lockwasher and nut. Repeat for the other side.


OPERATION:

USE OF DUAL WHEELS ON THE TRACTOR IS REQUIRED.

The steering sulky allows the tractor-sulky combination to be operated as a single unit.



One Gravely Lane Clemmons, N. C. 27012

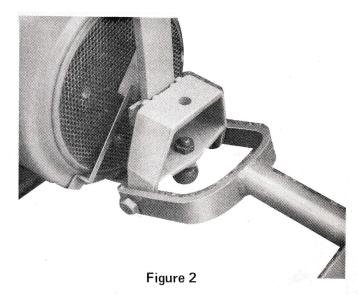

The tractor will turn in the direction the steering wheel is turned. Care should be used when operating the unit on slopes.

SAFETY FIRST:

- 1. Operate unit slowly and in an open area until you are familiar with the operation and action of this type of steering.
- 2. Always reduce speed in sharp turns.
- 3. Always keep a firm grip on the steering wheel.

LUBRICATION:

Upon assembly and after every 8 use hours grease all fittings with general purpose grease. There are 6 fittings.

Wheels - 2 Spindles - 2 Cross Bar - 1 Steering Column - 1

Printed in U.S. A.