



Figure 1

1. Raise tractor wheel and remove the three bolts securing the wheel to the wheel hub.



Figure 2

2. Place a dual wheel spacer in position in the wheel. Using the long bolts included with the spacers, secure the spacer and wheel to the wheel hub.



Figure 3

3. Secure outer wheel to the dual wheel spacer using the bolts that originally held the wheel to the wheel hub.



1 Gravelly Lane
Clemmons, N.C. 27012

Printed in USA