


GRAVELY

ATTACHMENT CLUTCH CONTROL

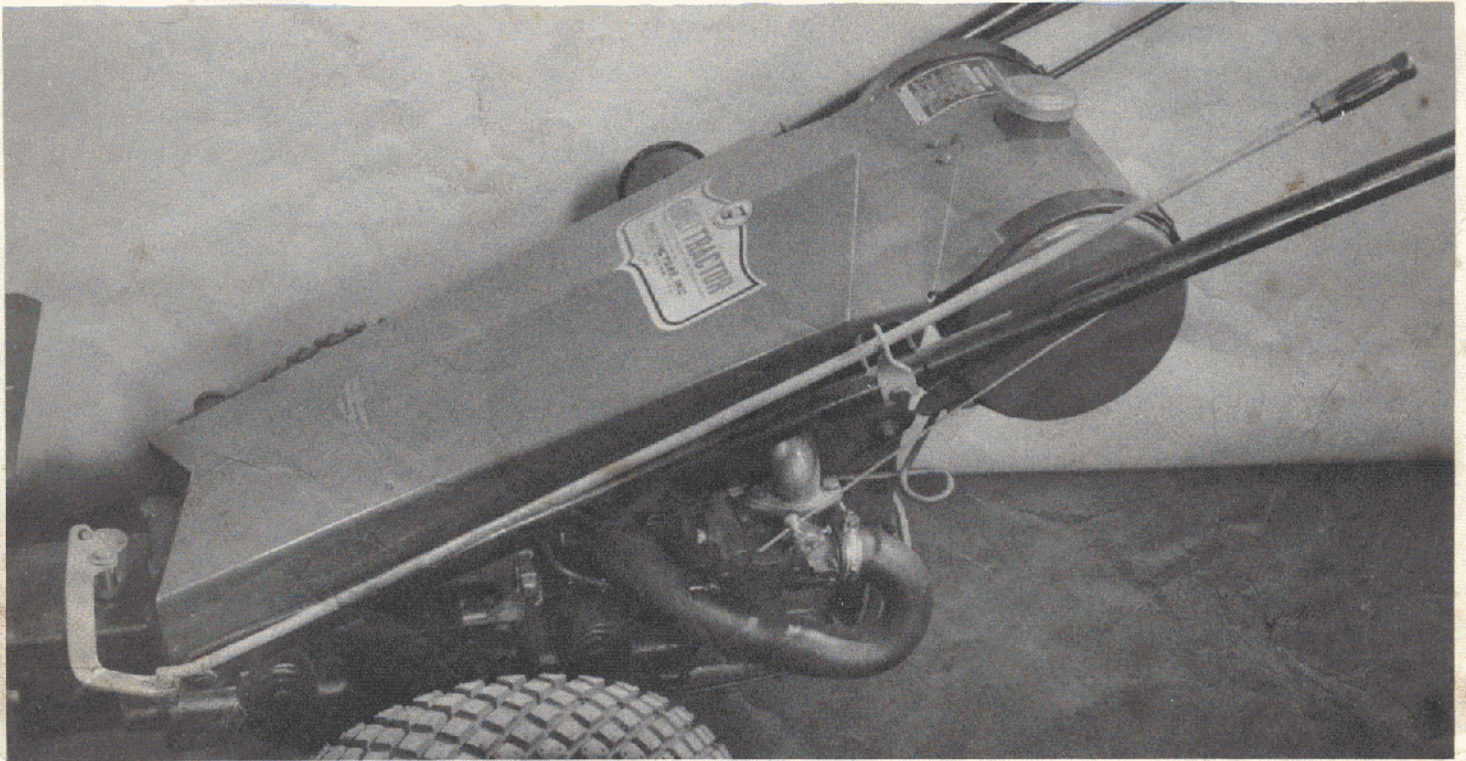


NOW--ATTACHMENTS ENGAGED AND DISENGAGED QUICKLY AND EASILY!

Whether you walk behind the Tractor or ride on a Sulky, you can now engage and disengage the Attachment with one quick motion...even while the Tractor is moving!


Simple, strong, and safe, the Attachment Clutch Control makes using the Gravelly Tractor even more convenient, more efficient.

You can install the Kit yourself in a few minutes. The Kit itself is inexpensive, less than \$5.00 in most states.

Find out for yourself how much more enjoyment you will receive from using your Gravelly Equipment with this optional accessory. See your Gravelly Representative today!

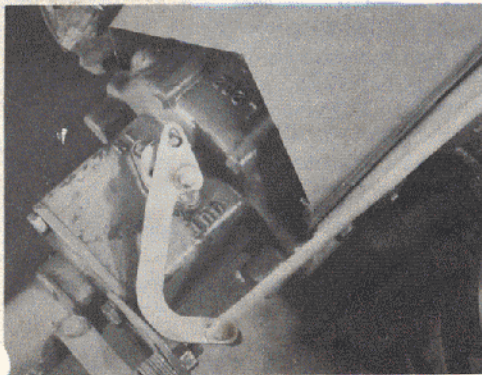

 
**PUSH and Attachment
Clutch is DISENGAGED**



**PULL and Attachment
Clutch is ENGAGED**



EASY!

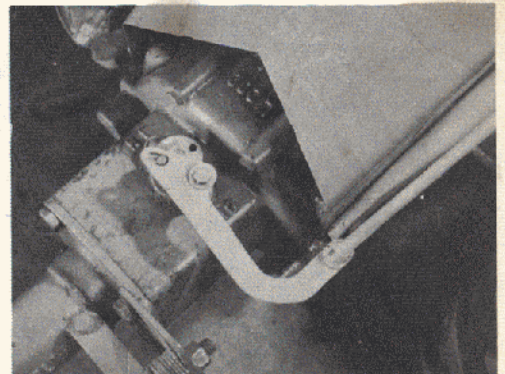

GRAVELY TRACTORS

DUNBAR, WEST VIRGINIA



GRAVELY ATTACHMENT CLUTCH HANDLE

ILLUSTRATED PARTS and PRICE LIST

EFFECTIVE

JANUARY 1, 1962

Prices Subject to Change Without Notice

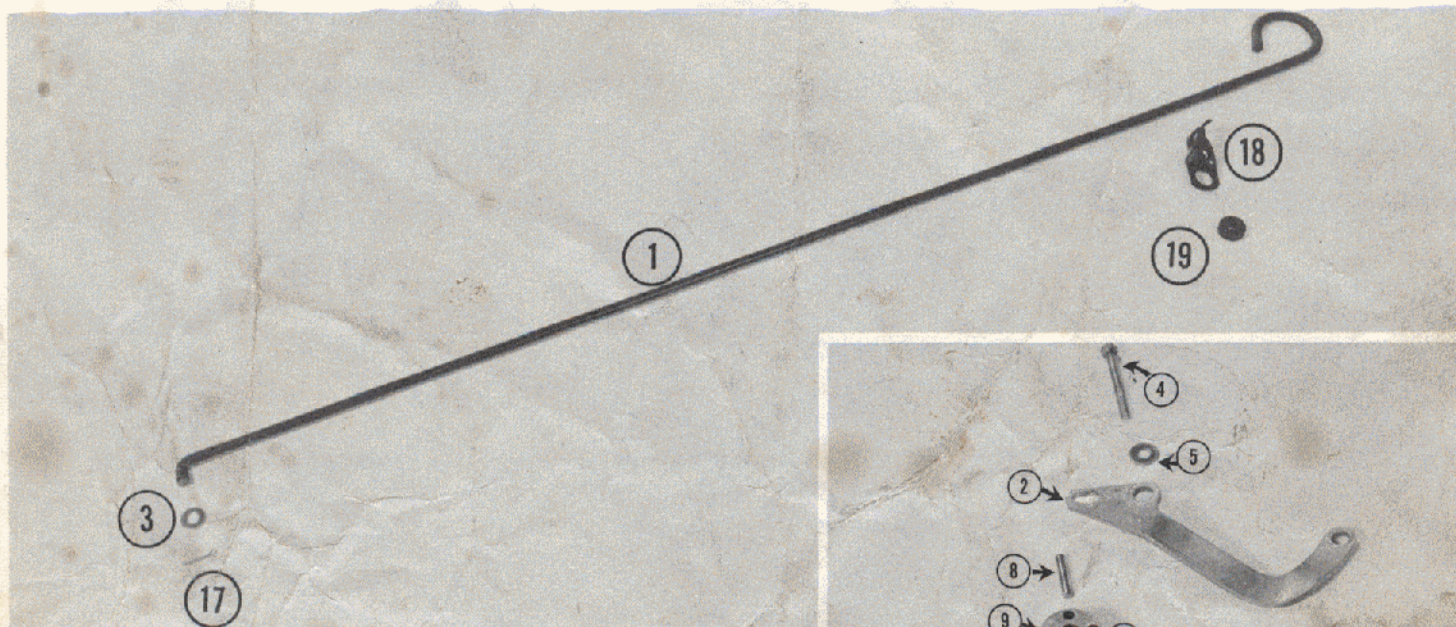


Photo No.	No. Req'd.	Part No.	Description	Price
1	1	L-130	Shifter Rod	1.50
2	1	L-129	Shifter Arm	1.30
3	1	403-W	Shifter Rod Washer	.01
4	1	166-S	Spacer Bolt	.04
5	1	401-W	Spacer Flat Washer	.01
6	1	L-128	Spacer	.30
7	1	242-N	Spacer Bolt Nut	.06
8	1	L-134	Shifter Dowel	.13
9	1	L-127	Shifter Body	1.10
10	1	801-A	Shifter Shaft	
			Set Screw	.18
11*				
12*				
13*				
14*				
15*				
16*				
17	1	602-C	Shifter Rod Cotter Pin	.01
18	1	L-131	Shifter Rod Bracket	.60
19	1	L-827	Shifter Rod Grommet	.06

ASSEMBLY INSTRUCTIONS

Remove Locator Body and replace with L-127 Shifter Body, using Spring and Ball from old Locator Body.

Be sure Spring and Ball are in position. Assemble to Shipper Shaft and Guide. This sub assembly must then be locked in place with Set Screw.

Insert Dowel Pin in L-127 Shifter Body. Replace Unit in Tractor. Fasten to Advance Casting on right side (viewed from Tractor Handles), with Bolt and Nut previously removed.

Place L-128 Spacer over Bolt hole, with machined "shoulder" up. Place Slot in L-129 Shifter Arm over Dowel, and drilled hole over the Spacer, with bend in the Shifter Arm down, and end pointing to the rear of the Tractor. See Illustration on back.

Fasten with Bolt, Washer and elastic stop Nut provided. The Bolt screws through the Advance Casting, the Nut is placed on the end of the Bolt inside the Advance Casting, and locked firmly in place.

Fasten Shifter Rod Bracket to Handle Bolt, insert Grommet in large hole in Bracket, assemble Shifter Rod through Grommet, assemble end of Shifter Rod to Shifter Arm with Washer and Cotter Pin.

Pulling Rod engages Attachment. Pushing Rod disengages.

*Standard on Tractor - not furnished with Kit.
(Tractors with Model number older than "C" should have L-132 Spring)

GRAVELY TRACTORS

DUNBAR, WEST VIRGINIA