



Illustrated Parts List

Model Series

303400

TYPE NUMBERS
0021 through 1454.

TABLE OF CONTENTS

Air Cleaner	7
Alternator	16
Blower Housing	13
Camshaft	2
Carburetor	6
Carburetor Overhaul Kit	6
Controls	11
Crankcase Cover/Sump	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	17 & 18
Electric Starter Kit	14
Engine Gasket Set	7
Exhaust System	8 & 9
Flywheel	14
Fuel Supply	10
Governor Spring	11
Ignition	16
Intake Manifolds	4
Lubrication	5
Piston/Rings/Connecting Rod	2
Rewind Starter	15
Shrouds	12
Valve Gasket Set	6



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL








 
 
 


1330 REPAIR MANUAL










 


1319 WARNING LABEL





REQUIRED when replacing parts with warning labels affixed.

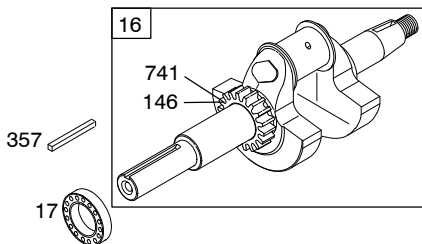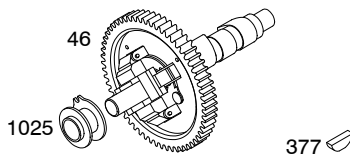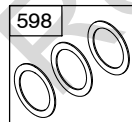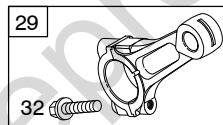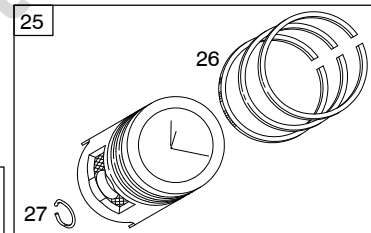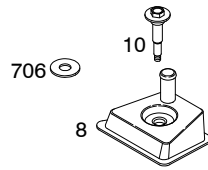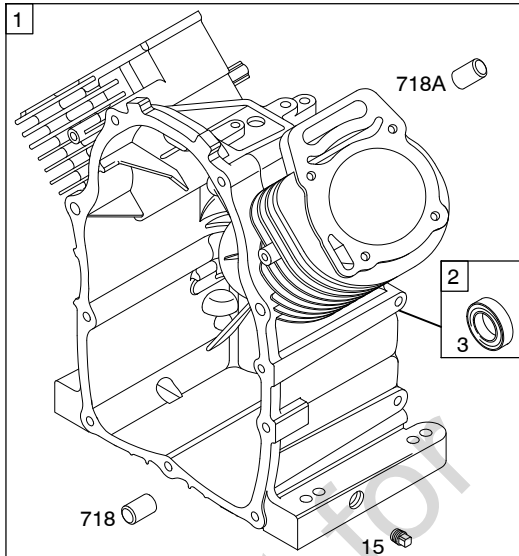

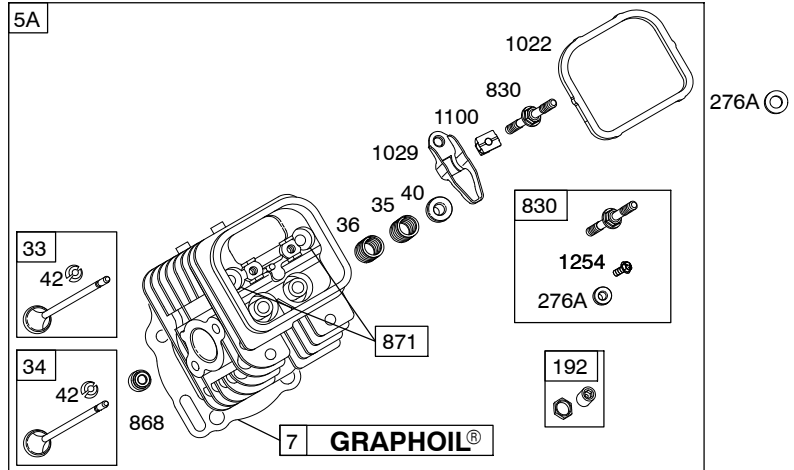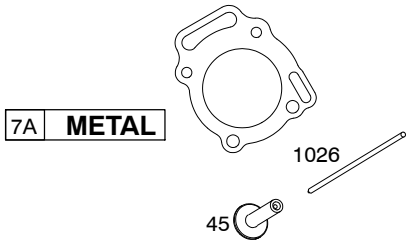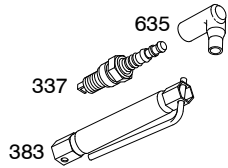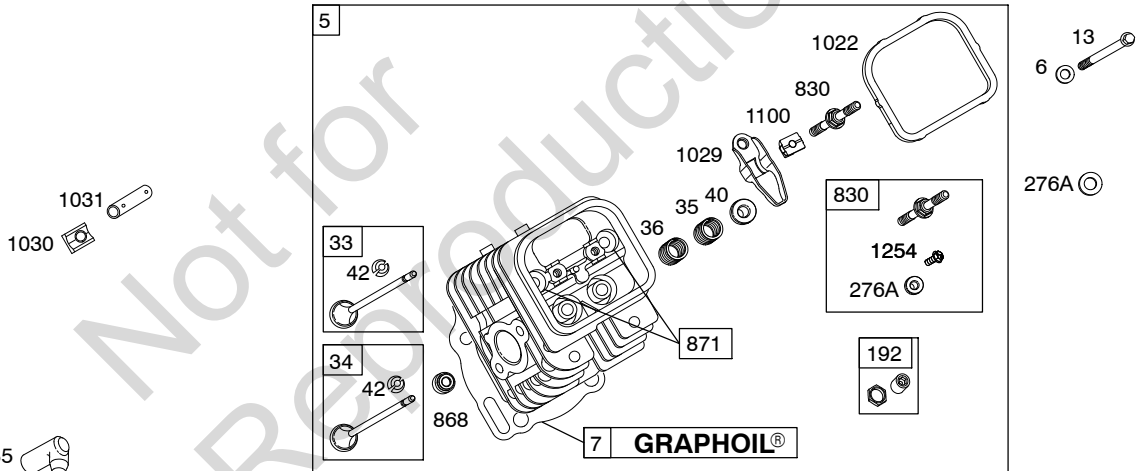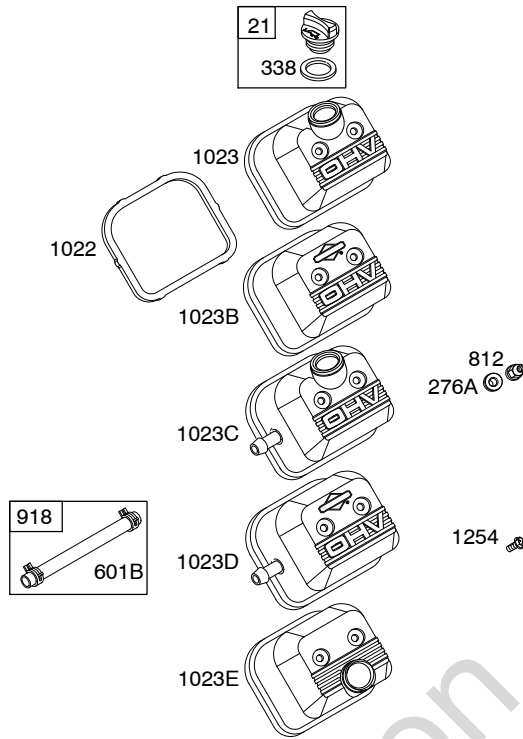








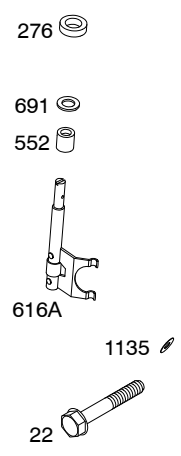
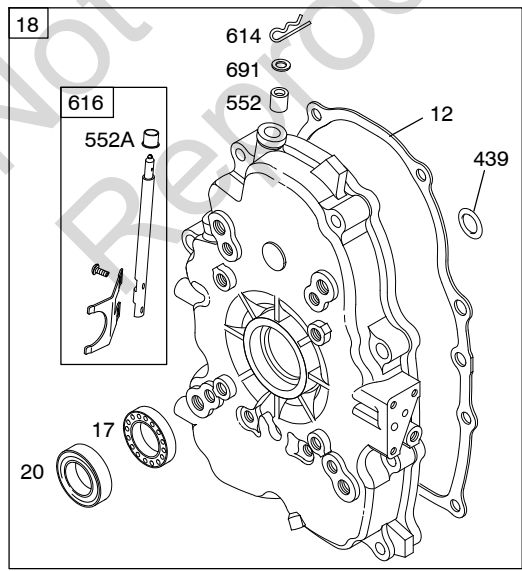

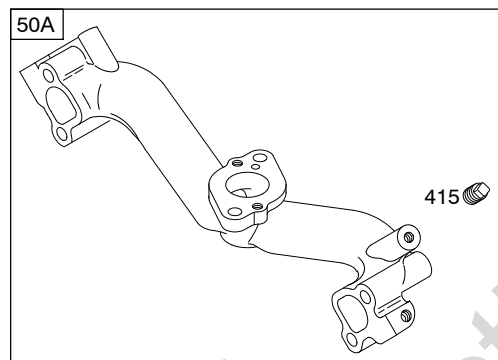
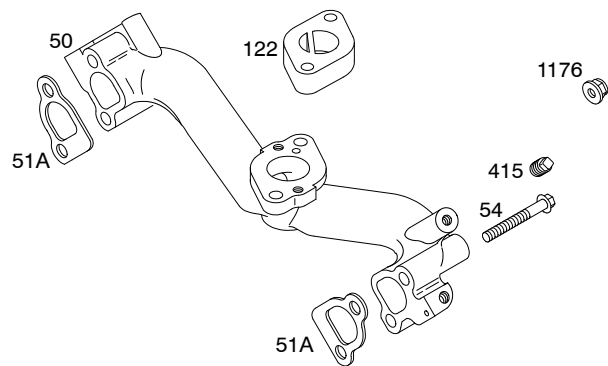


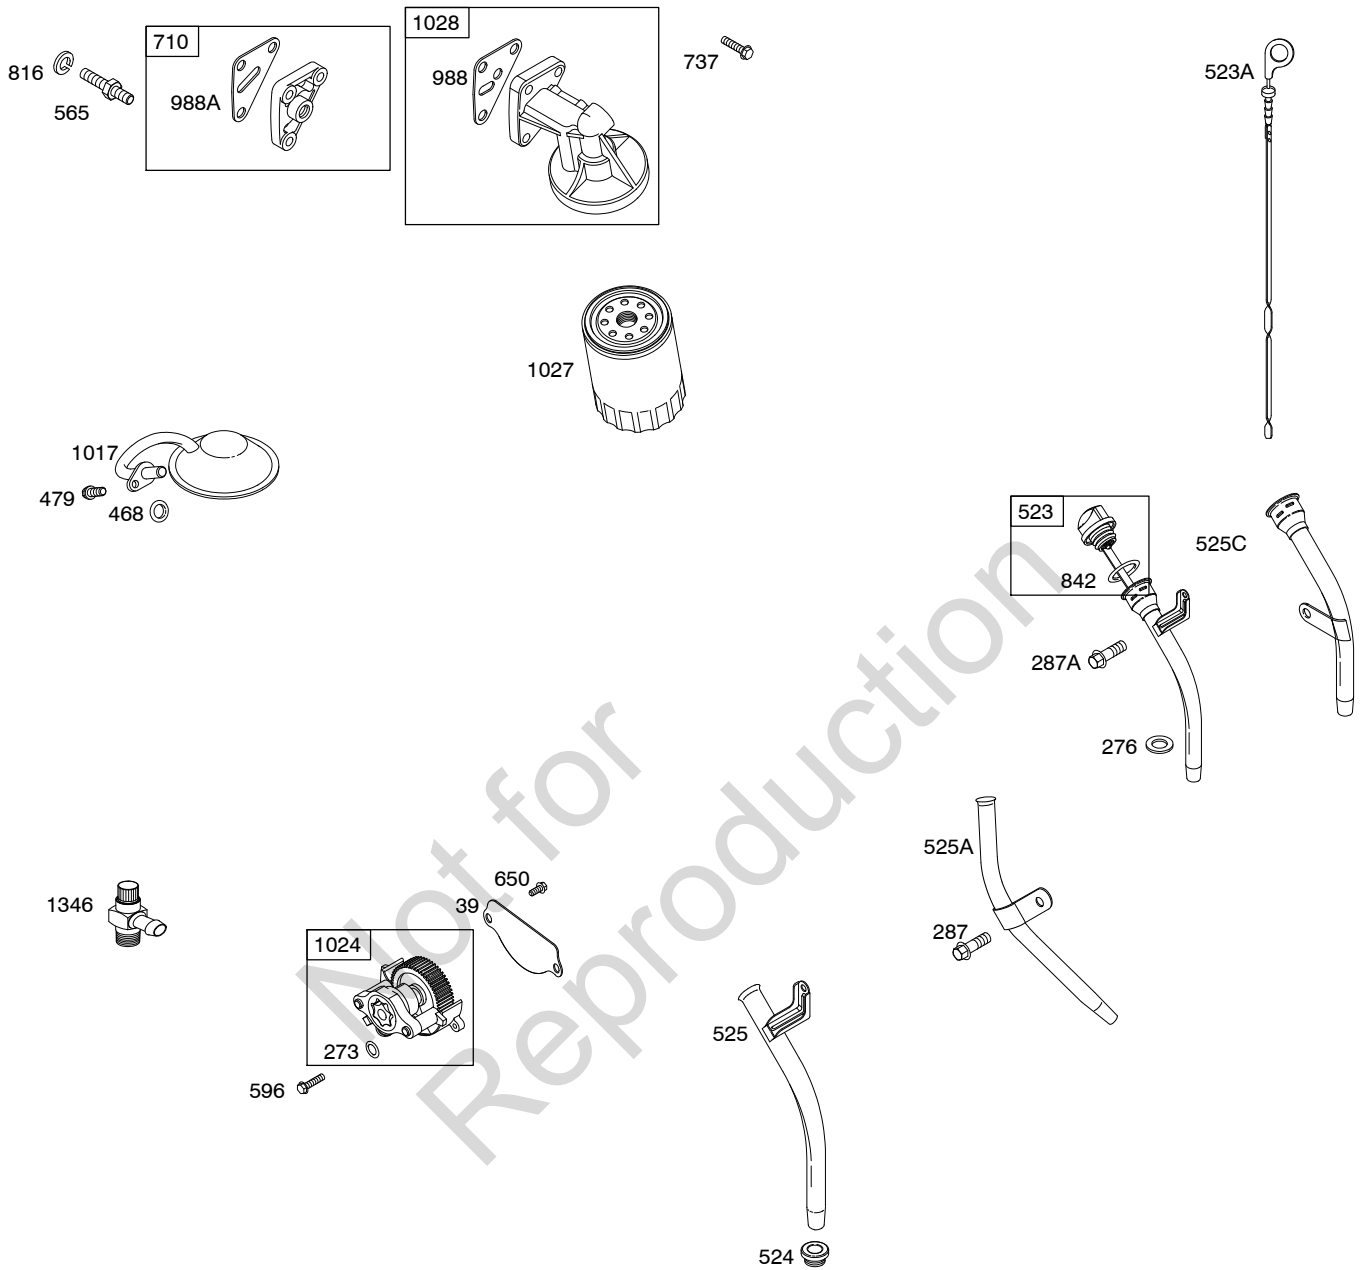


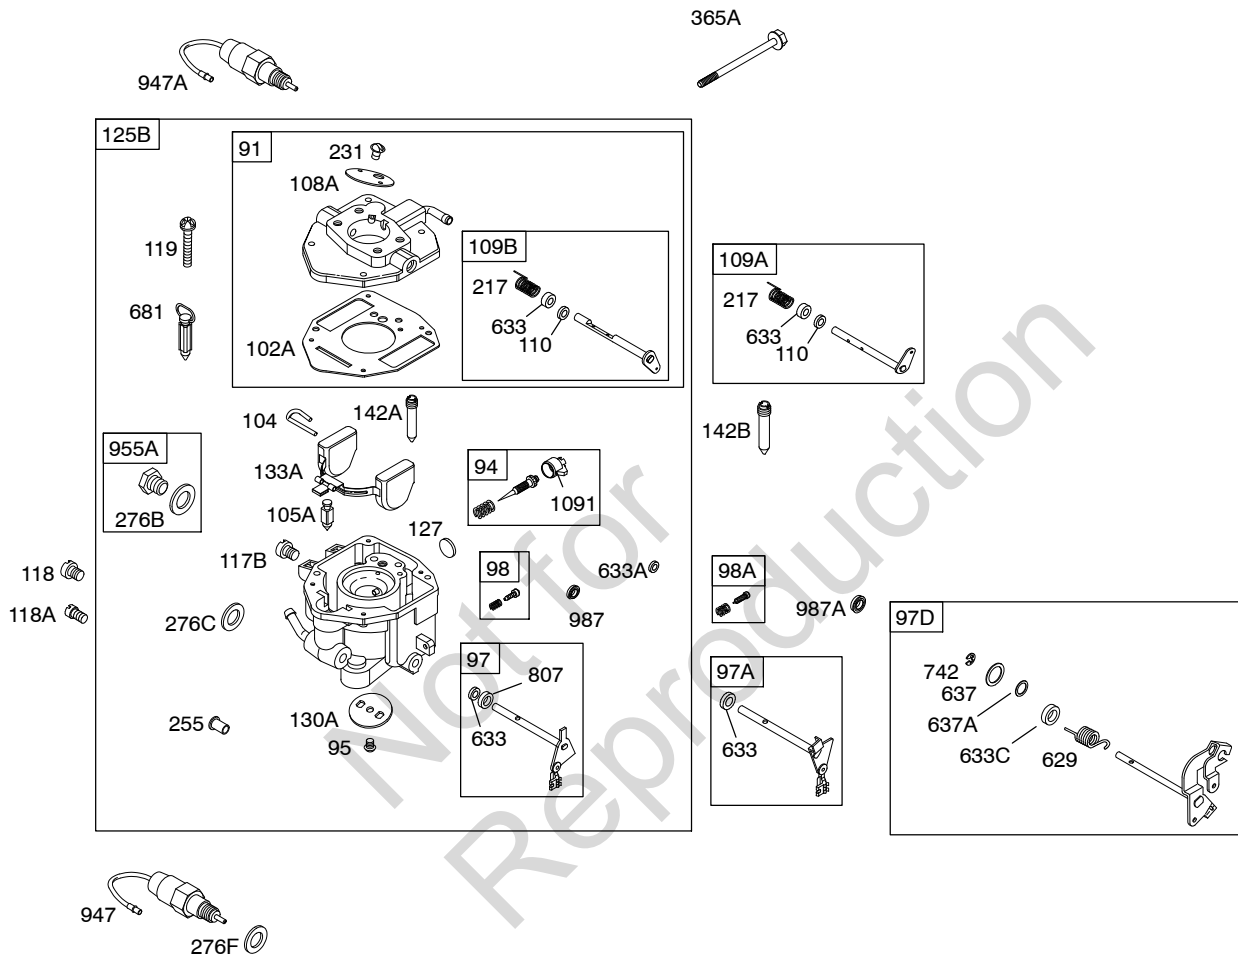

   



 
 

No information for high altitude jet on types : 1314 & 1319.

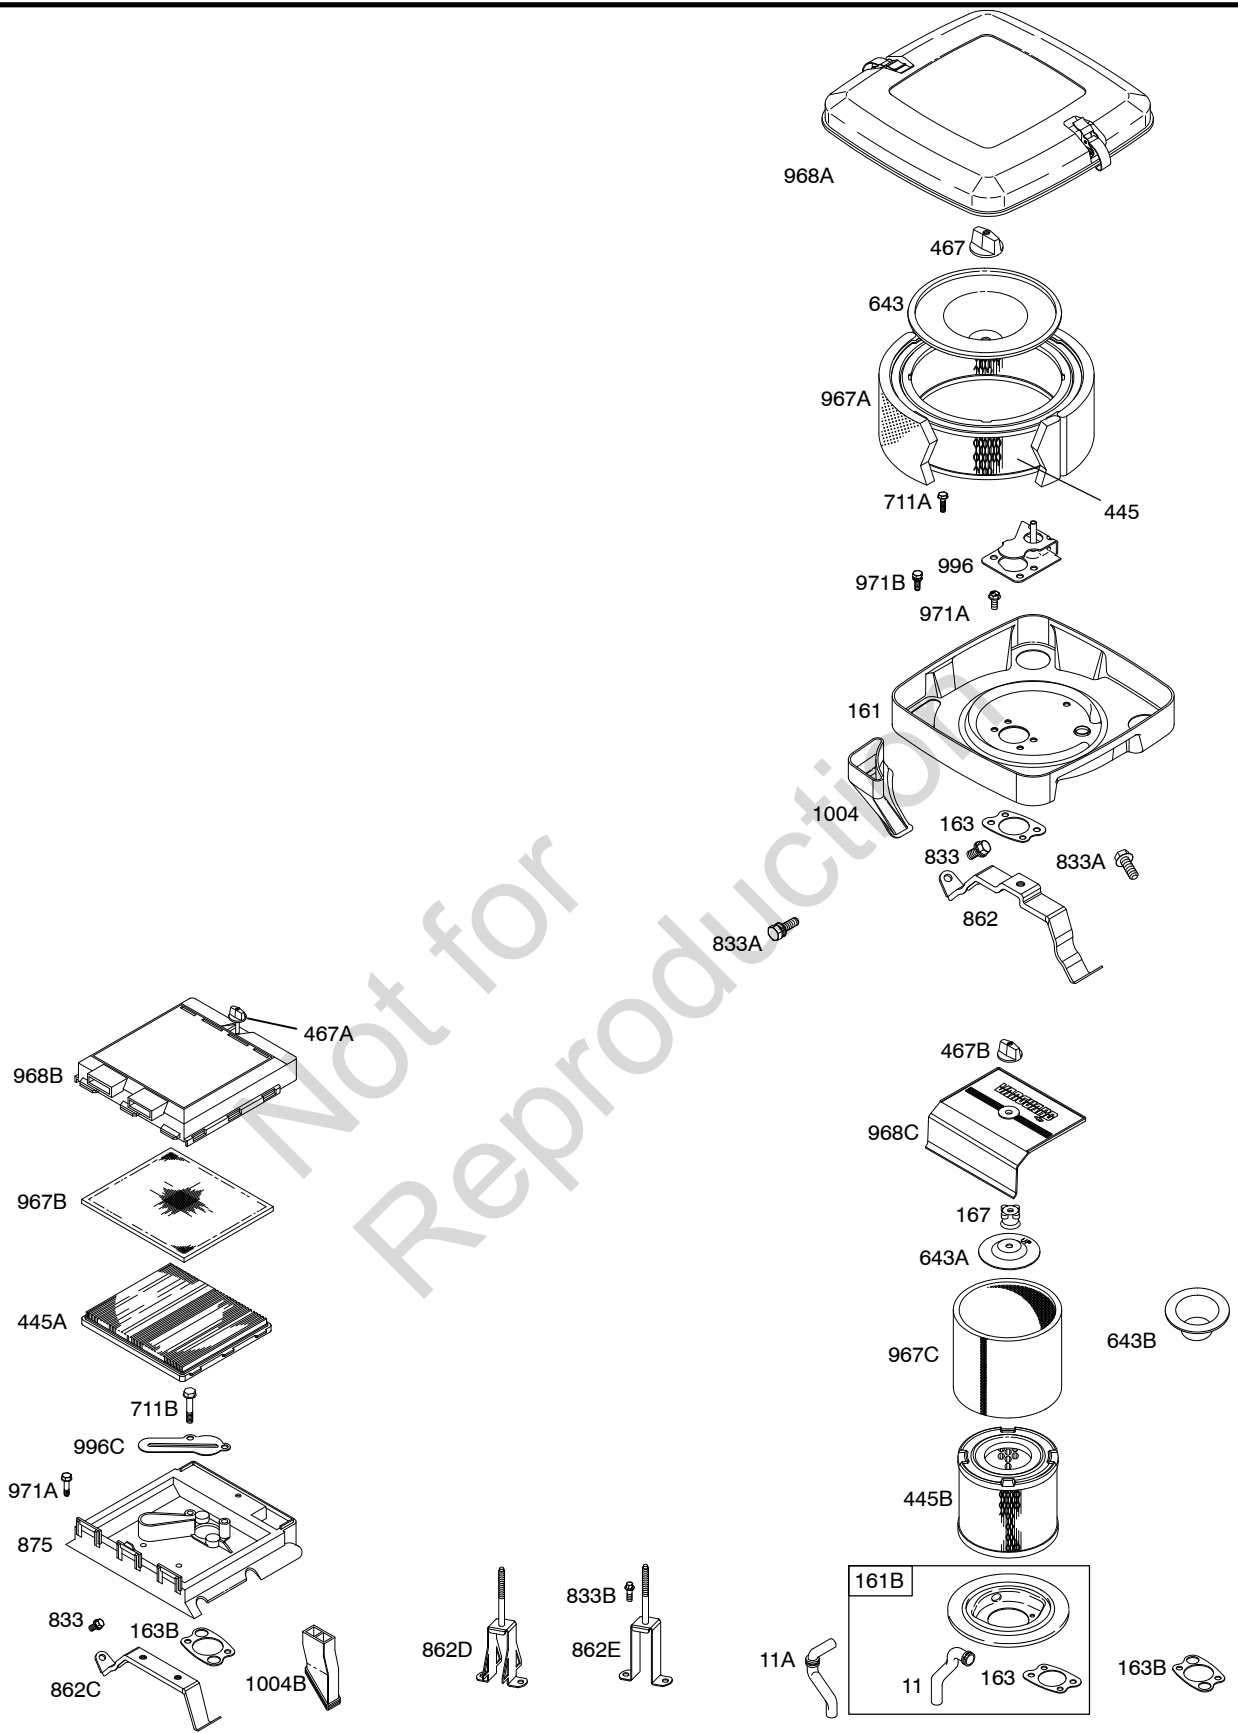

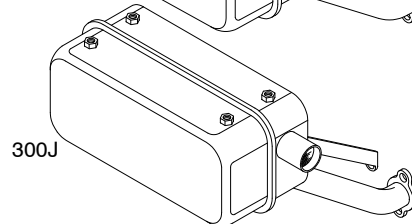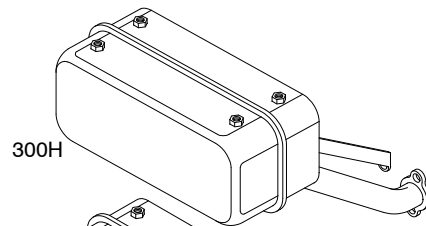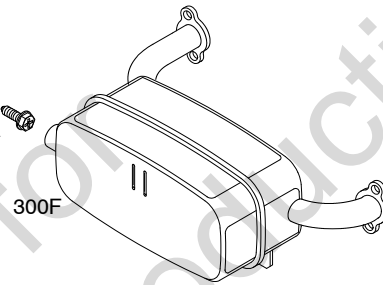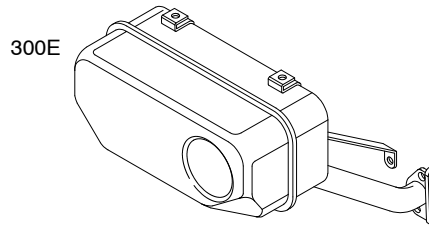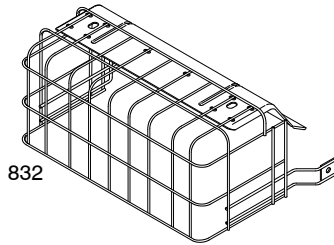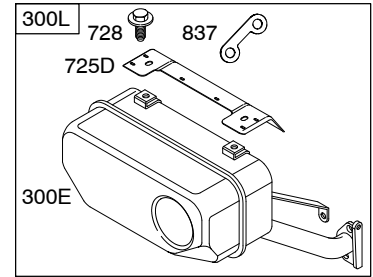




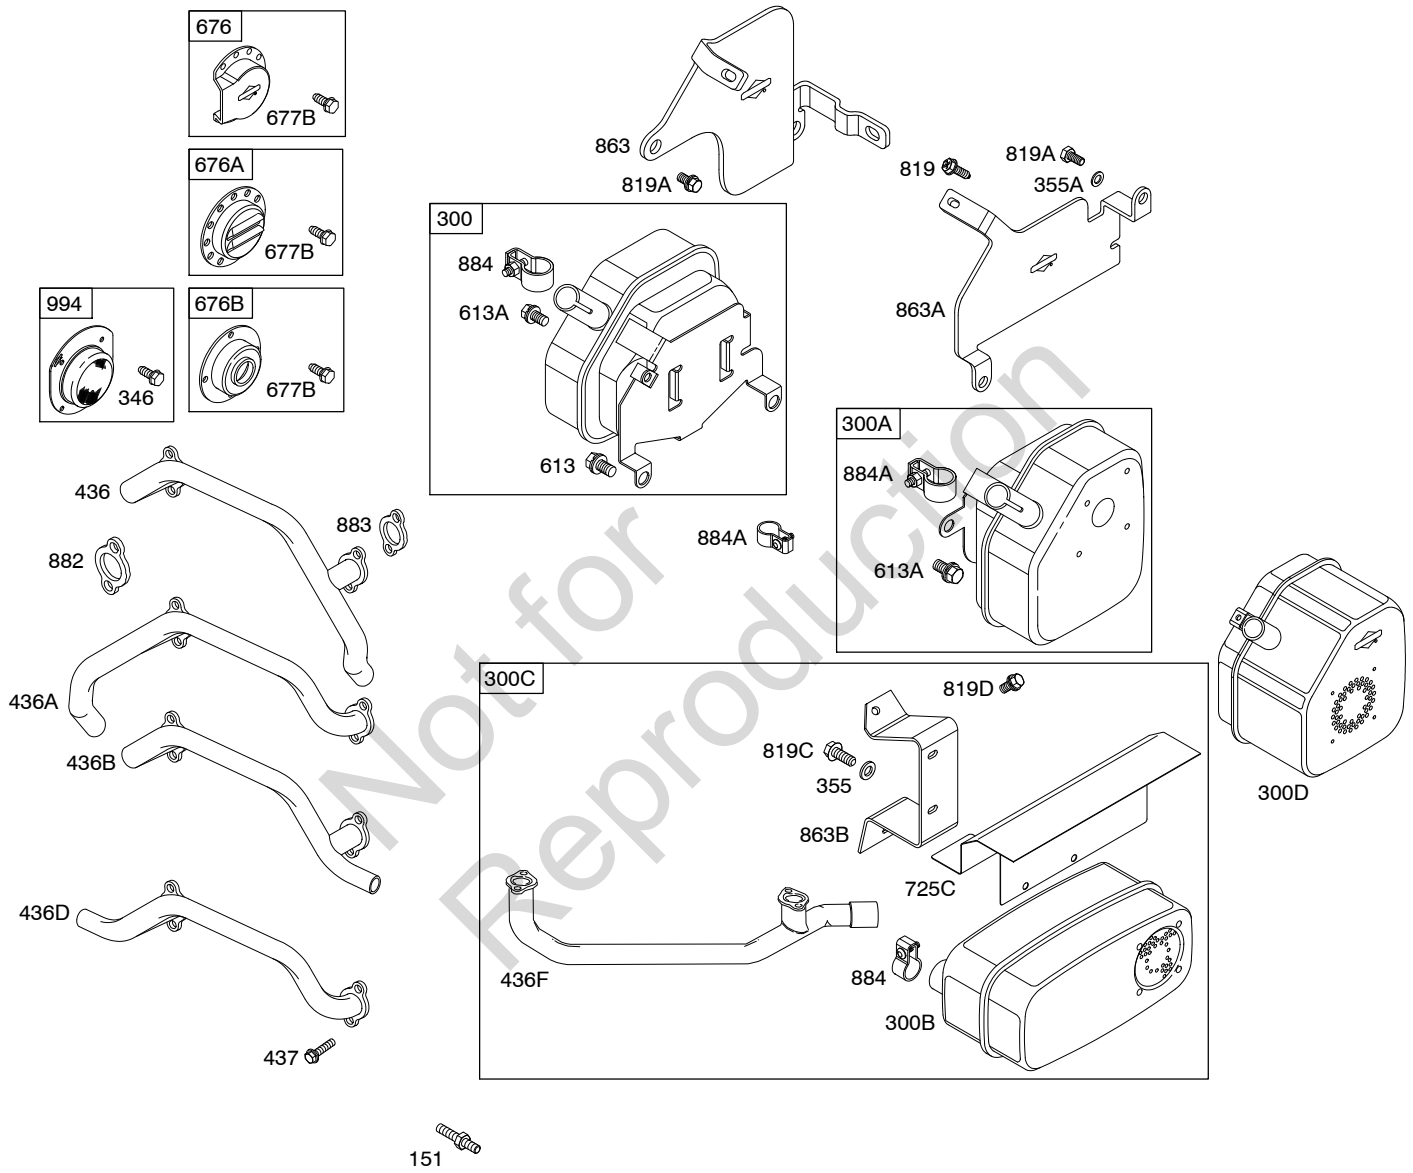



7 QUART

  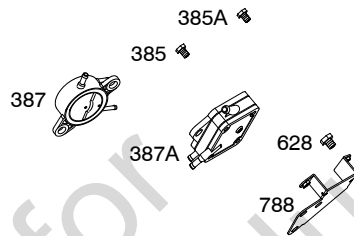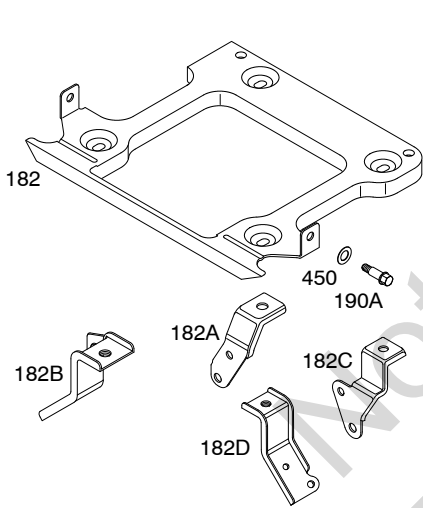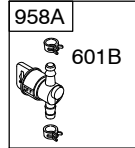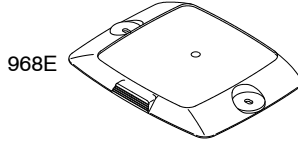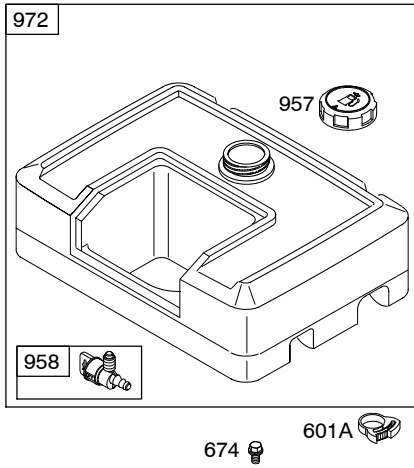

9 QUART

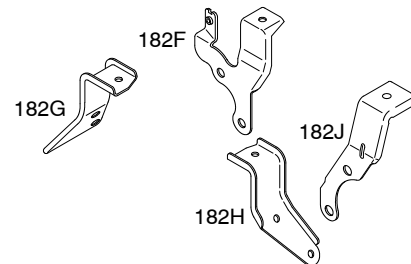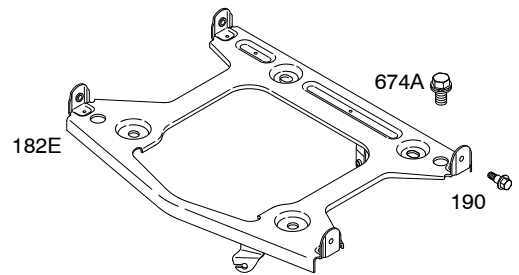
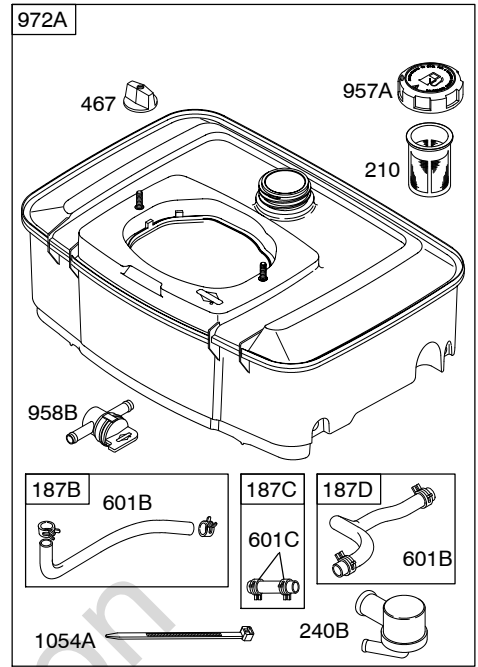


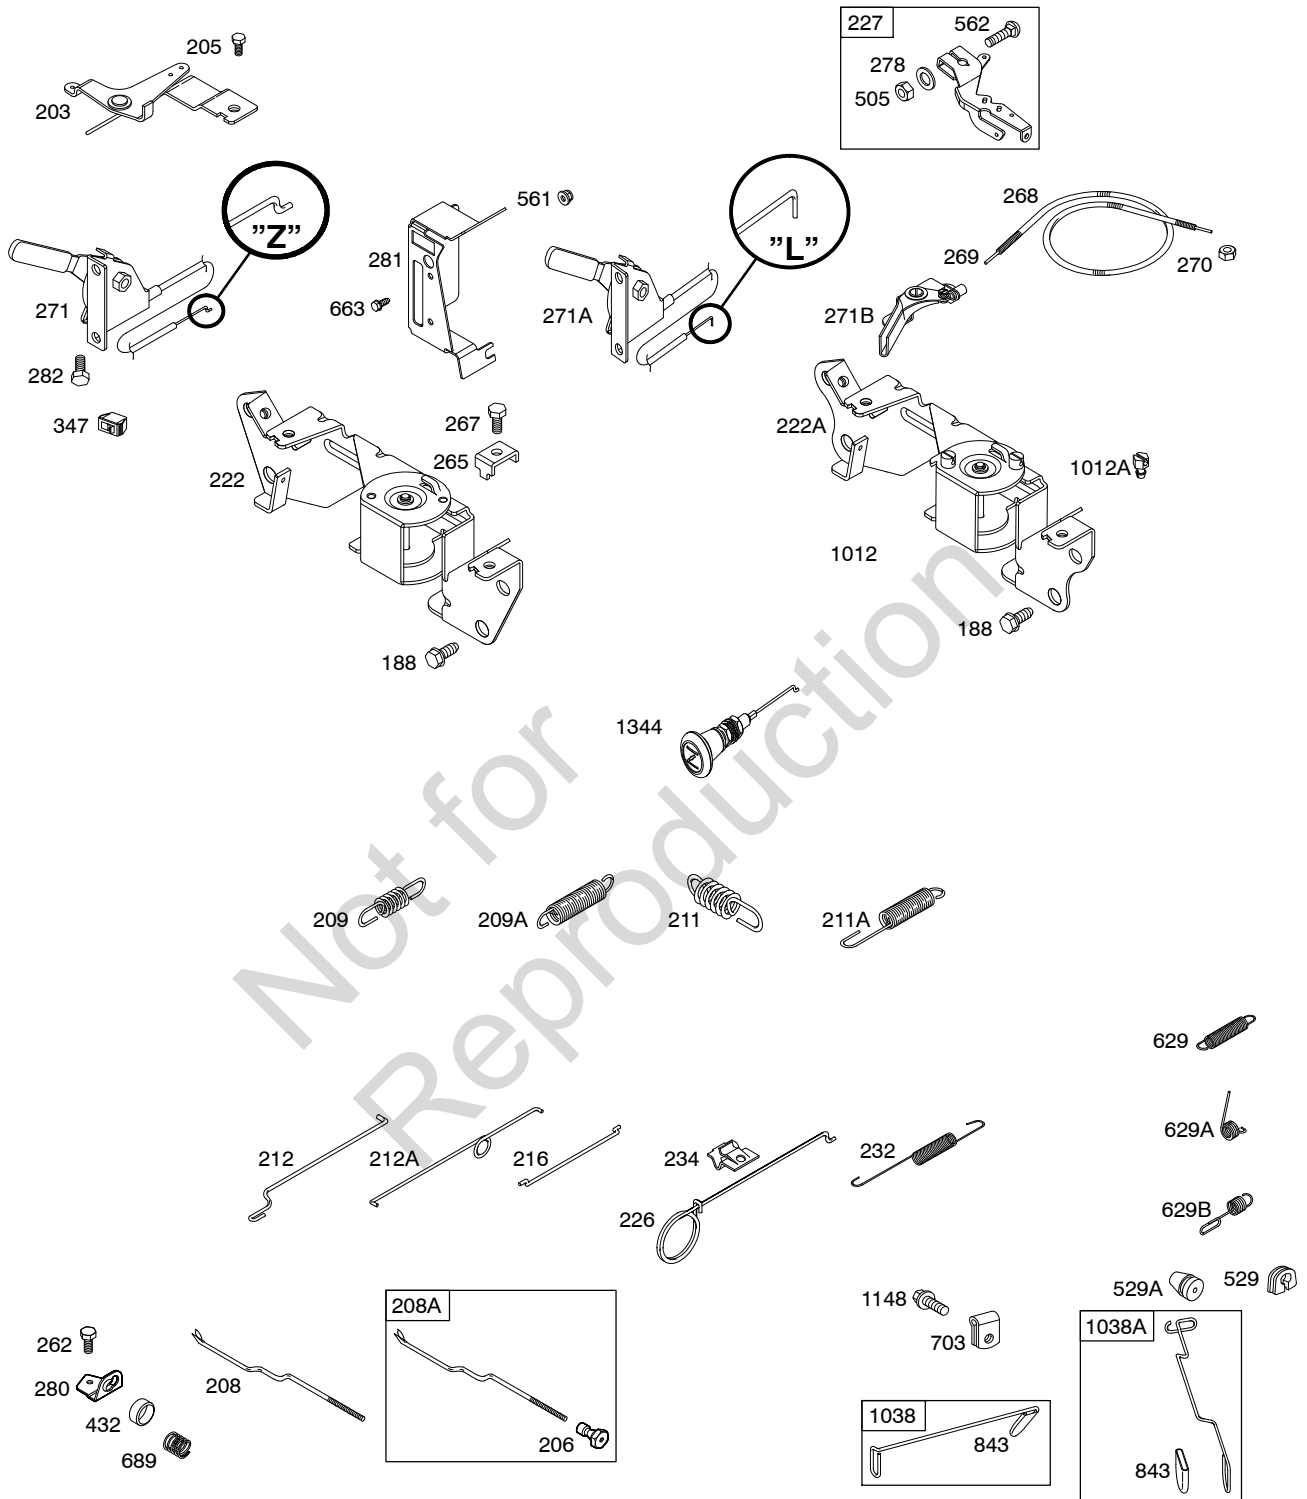




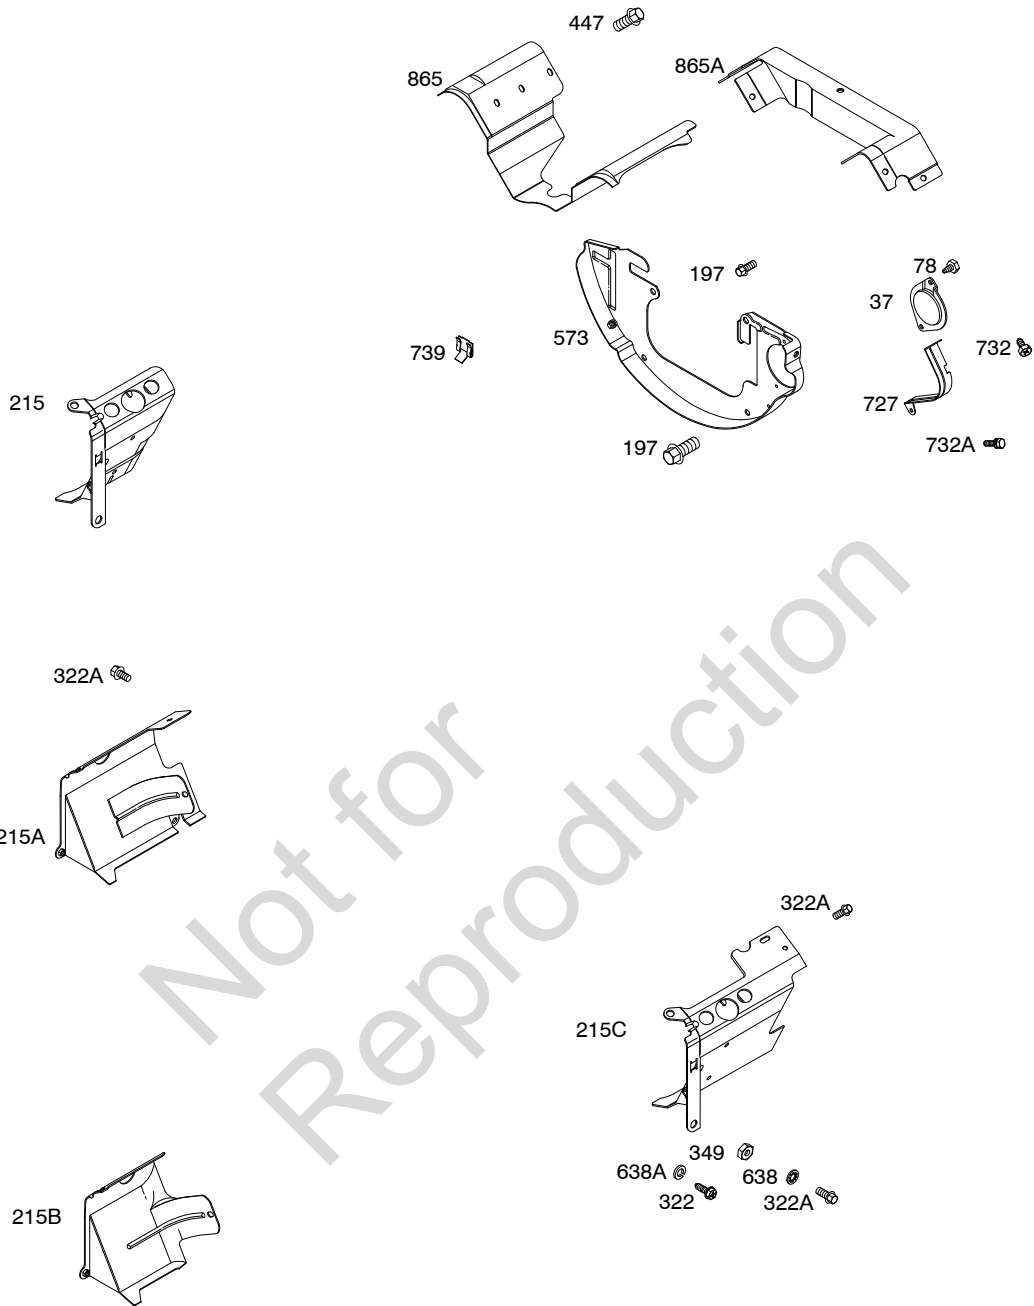







1036 EMISSIONS LABEL

METAL AIR CLEANER BASE








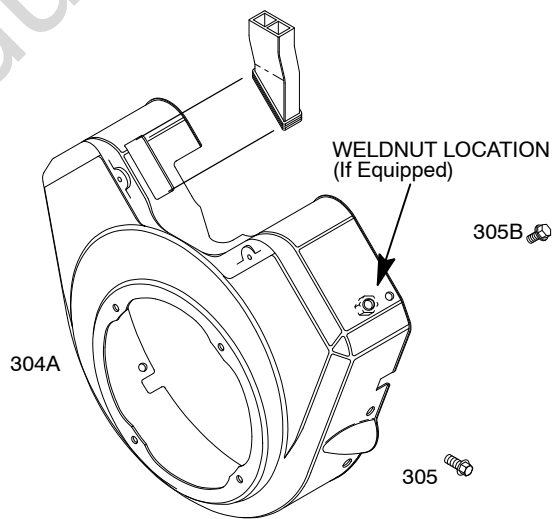
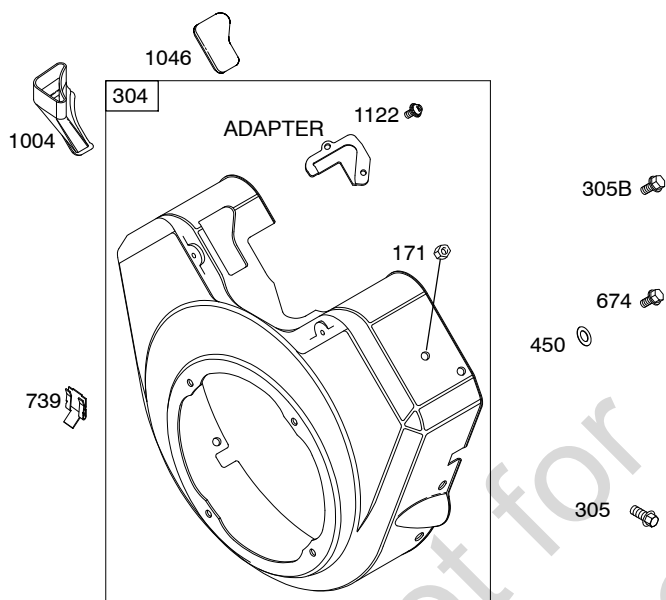





PLASTIC AIR CLEANER BASE

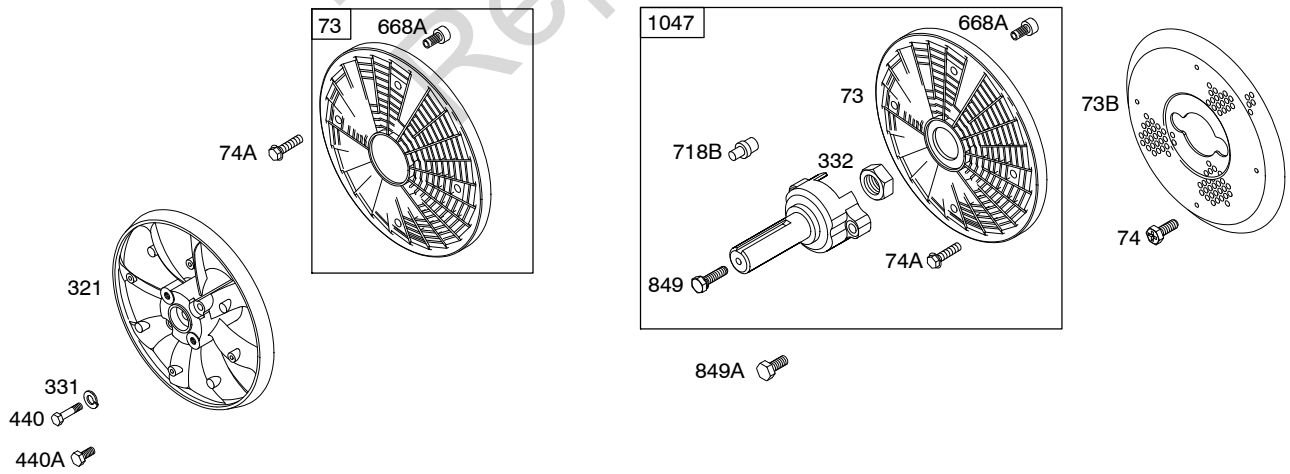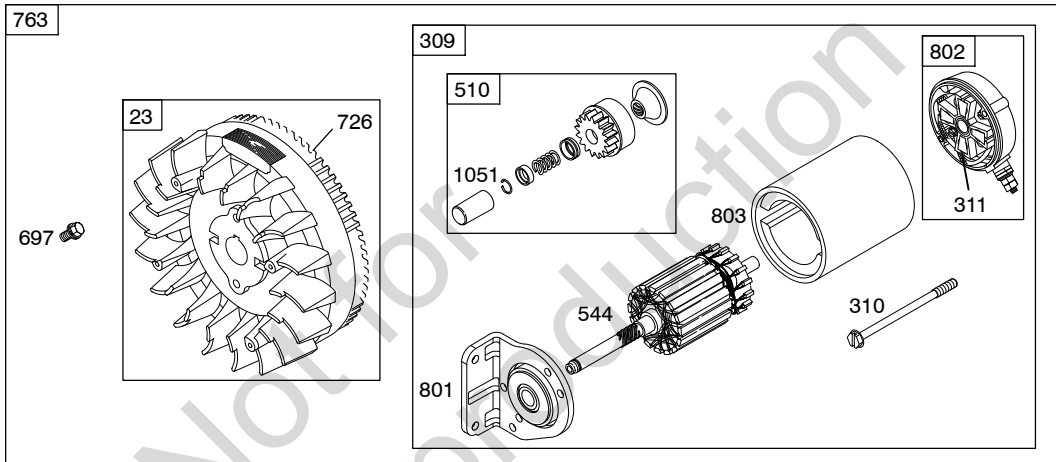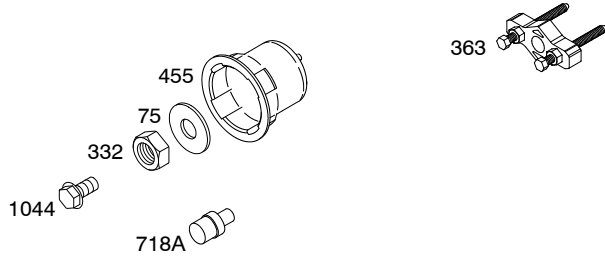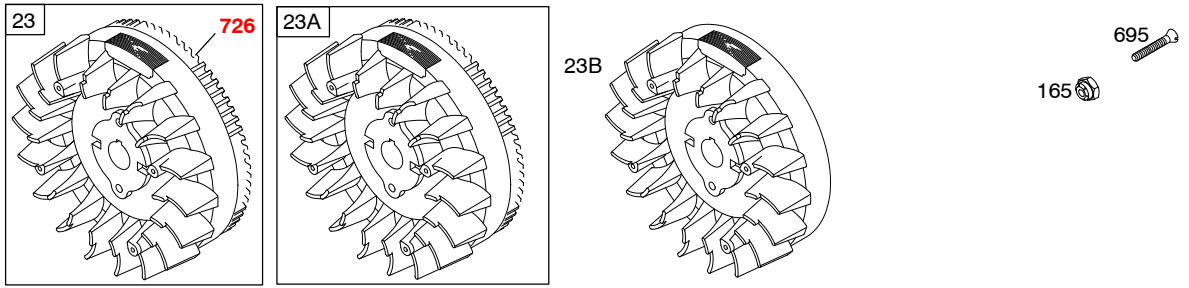


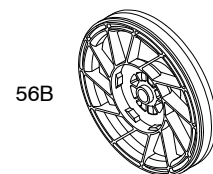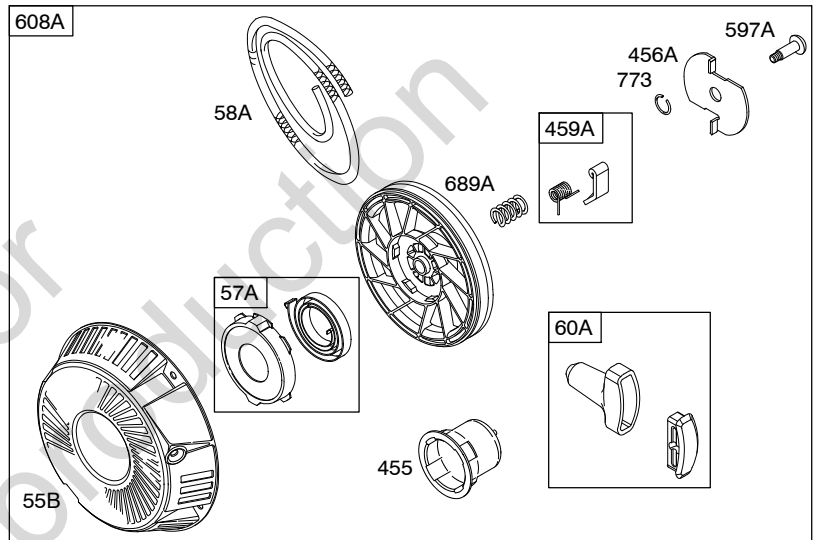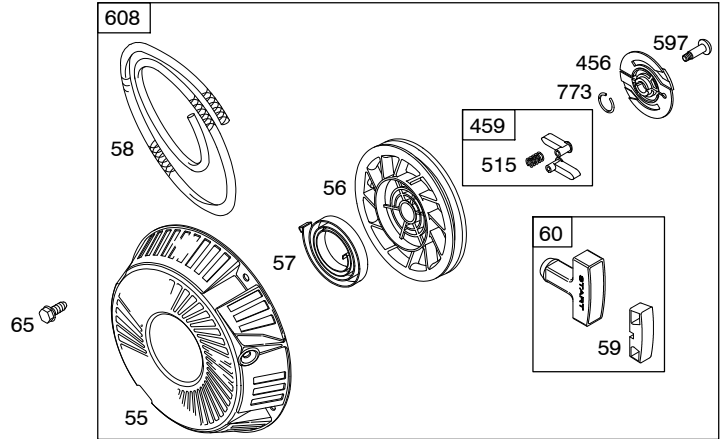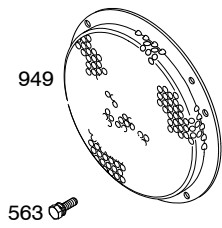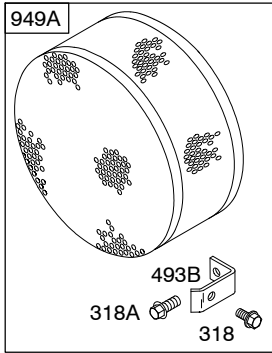

DUAL CIRCUIT		5 - 9 AMP	10 - 16 AMP
474B	1059	474C	1059
877	877B	877C	
878	578	578	

 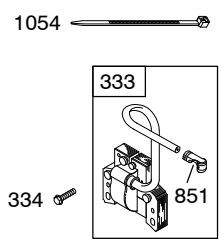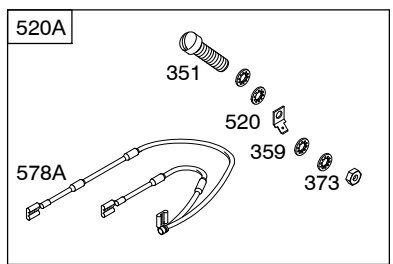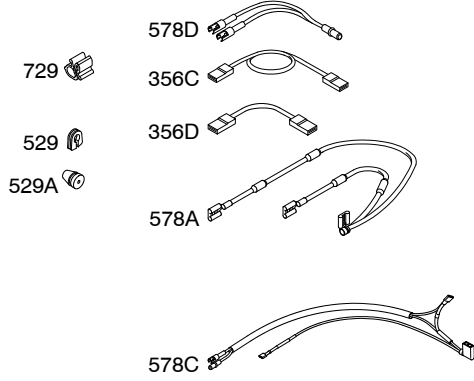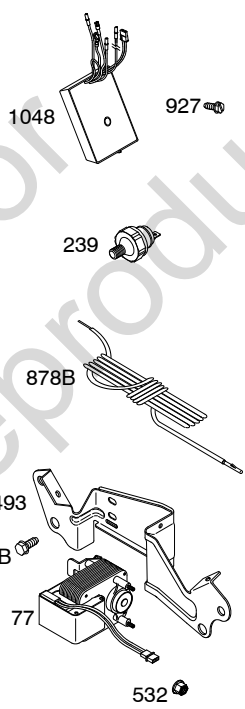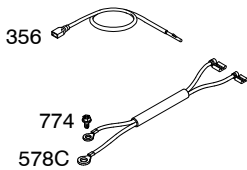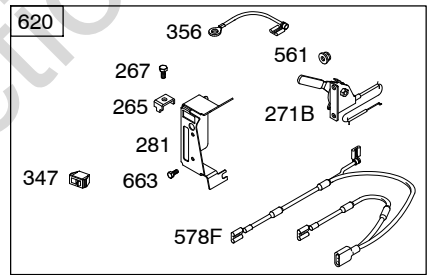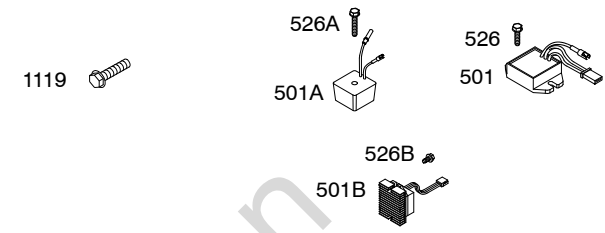
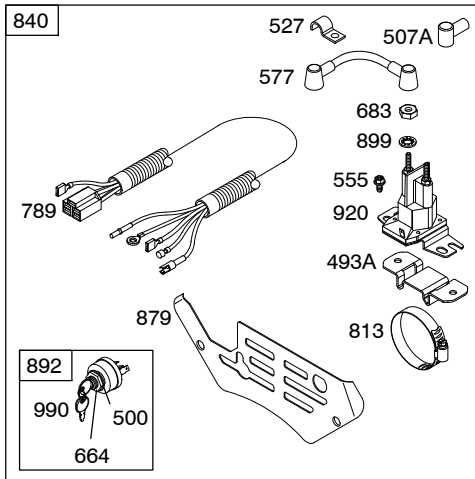




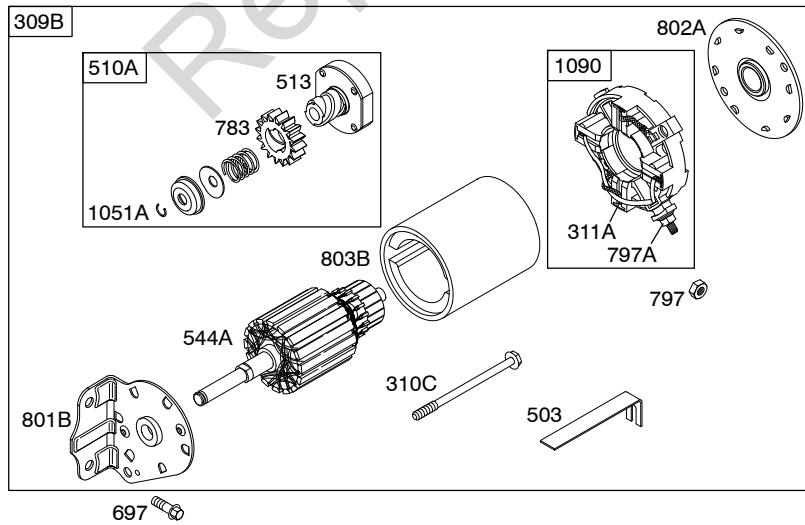
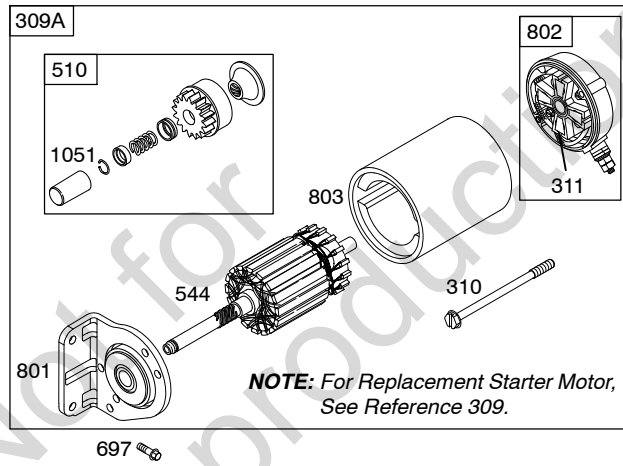
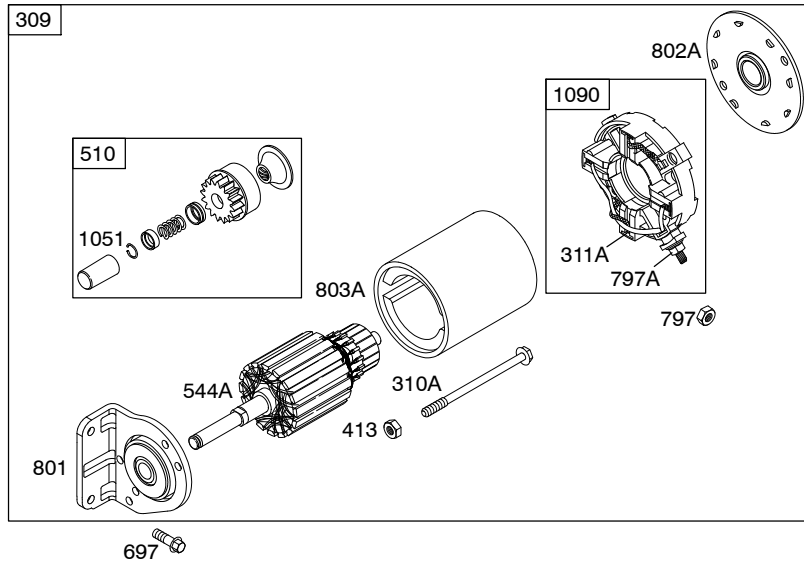


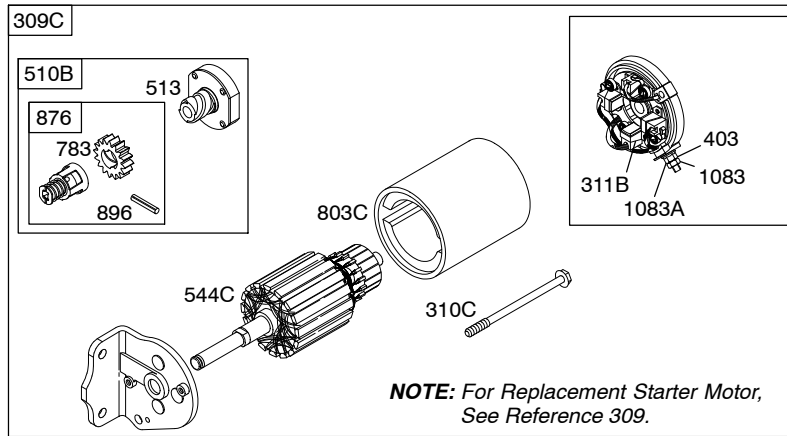

697

1009

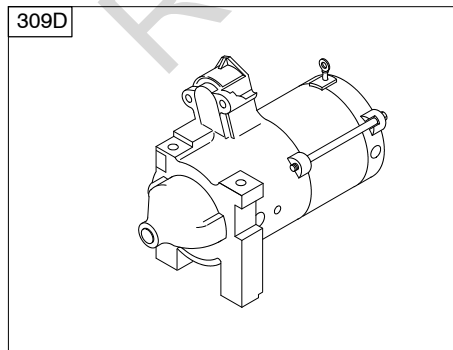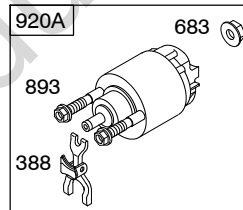

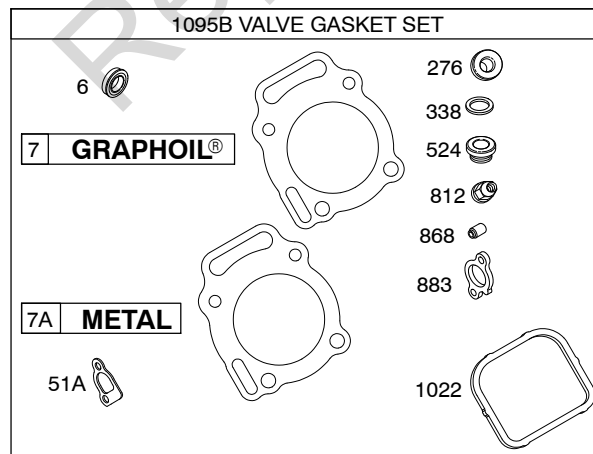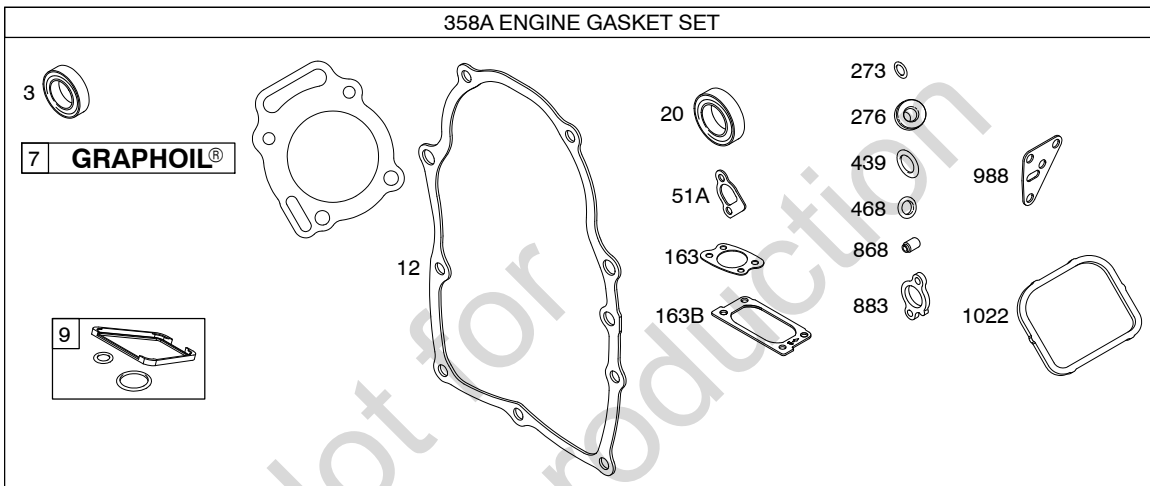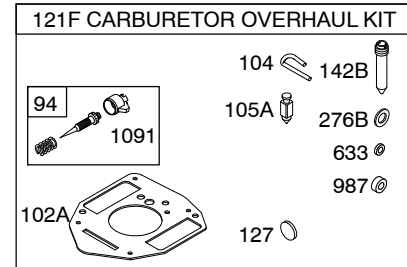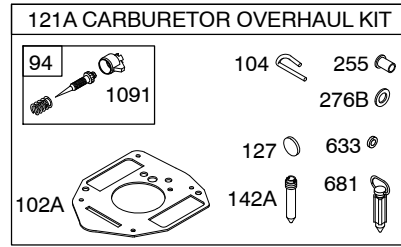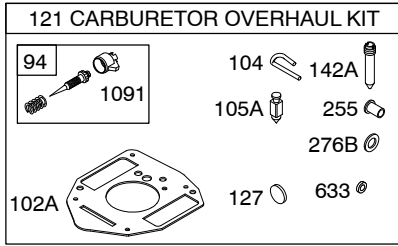

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	807745	Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0022, 0027, 0028, 0035, 0036, 0037, 0042, 0044, 0052, 0054, 0060, 0061, 0074, 0078, 0084, 0085, 0092, 0123, 0129, 0130, 0136, 0312, 0313, 0315, 0317, 0319, 0321, 0325, 0327, 0339, 0342, 0344, 0350, 0352, 0354, 0360, 0362, 0365, 0366, 0373, 0374, 0378, 0382, 0385, 0391, 0392, 0394, 0396, 0397, 0399, 0404, 0405, 0415, 0416, 0417, 0419, 0420, 0425, 0427, 0428, 0430, 0435, 0450, 0453, 0458, 0464, 0475, 0476, 0477, 0481, 0488, 0489, 0494, 0495, 0496, 0498, 0501, 0502, 0505, 0518, 1012, 1013, 1015, 1017, 1019, 1021, 1025, 1031, 1033, 1042, 1044, 1049, 1054, 1060, 1062, 1066, 1073, 1074, 1078, 1087, 1094, 1104, 1105, 1108, 1111, 1114, 1116, 1118, 1119, 1120, 1127, 1129, 1131, 1133, 1141, 1158, 1159, 1164, 1167, 1168, 1175, 1176, 1177, 1181, 1189, 1194, 1195, 1196, 1198, 1205, 1208, 1218, 1231, 1250, 1251, 1252, 1257, 1262.		692165	Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1232, 1293, 1346, 1412, 1413, 1421, 1425, 1432, 1434, 1449. 692166 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1162. 807849 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0133, 0412, 0462, 1112, 1162. 692167 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1138, 1149, 1191, 1192, 1217. 807851 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0138, 0139, 0438, 0439, 0491, 0492, 1138, 1149, 1191, 1192, 1217. 692168 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1180. 808056 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0456, 0480, 1180. 692169 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1238.		808296 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 1238. 808975 Crankshaft Used on Type No(s). 1348, 1381, 1410. 808740 Crankshaft Used on Type No(s). 1303, 1318, 1338, 1385. 17 690752 Bearing-Ball ----- Note ----- 691541 Bearing-Ball Used on Type No(s). 1238, 1256, 1313. 18 808847 Cover-Crankcase ----- Note ----- 808850 Cover-Crankcase Used on Type No(s). 0133, 0412, 1112, 1155, 1174. 808851 Cover-Crankcase Used on Type No(s). 1256, 1313. 808508 Cover-Crankcase Used on Type No(s). 1104, 1105, 1108, 1191, 1192, 1252, 1283, 1320, 1381, 1409, 1410. 808851 Cover-Crankcase (Used After Code Date 99072000). Used on Type No(s). 1238. 808850 Cover-Crankcase (Used Before Code Date 99072100). Used on Type No(s). 1238. 21 809500 Cap-Oil Fill 20 805049S Seal-Oil (PTO Side) 22 807362 Screw (Crankcase Cover/Sump)	

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
23	808766	Flywheel (Steel Ring Gear) ----- Note ----- 808774 Flywheel (Steel Ring Gear) Used on Type No(s). 1232, 1293, 1345, 1346, 1412, 1421, 1425, 1432, 1434. 808770 Flywheel (Steel Ring Gear) Used on Type No(s). 1057, 1110, 1236, 1278, 1295, 1306, 1311, 1322, 1331, 1348, 1384, 1416.	36	692084	Spring-Valve (Exhaust)	51A	692035	Gasket-Intake (Manifold to Head)		
			37	690715	Guard-Flywheel ----- Note ----- 841309 Guard- Flywheel Used on Type No(s). 1019, 1027, 1028, 1030, 1033, 1034, 1059, 1069, 1095, 1102, 1116, 1130, 1134, 1138, 1167, 1169, 1176, 1223, 1238, 1275, 1277, 1293, 1299, 1303, 1320, 1326, 1327, 1338, 1343, 1346, 1348, 1381, 1403, 1409, 1410, 1412, 1413, 1420, 1421, 1422, 1425, 1429, 1432, 1434, 1439, 1449, 1450.			51C	691694	Gasket-Intake (Carburetor To Manifold)
23A		Flywheel (For Replacement Flywheel, Order Part Number 808190, Electric Starter Kit, Reference 763)) ----- Note ----- 692158 Flywheel (Aluminum Ring Gear) Used on Type No(s). 1041, 1057, 1278, 1295.	39	690745	Deflector-Oil (Used After Code Date 98050700).	54	690676	Screw (Intake Manifold)		
			40	692058	Retainer-Valve	55	691568	Housing-Rewind Starter		
23B	690889	Flywheel (Rewind Starter)	42	807683	Keeper-Valve	55B	492193	Housing-Rewind Starter		
25	807619	Piston Assembly (Standard) ----- Note ----- 807809 Piston Assembly (.020" Oversize)	45	690977	Tappet-Valve	56	692085	Pulley-Starter		
			46	691557	Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0404, 0405, 0491, 0492, 1104, 1105, 1108, 1191, 1192, 1252, 1283, 1320, 1381, 1409, 1410.	56A	280918	Pulley-Starter		
26	807620	Ring Set (Standard) ----- Note ----- 807810 Ring Set (.020" Oversize)			809148 Camshaft Used on Type No(s). 1319.	56B	281235	Pulley-Starter Used on Type No(s). 0448.		
27	690683	Lock-Piston Pin			842064 Camshaft Used on Type No(s). 0129, 0130, 0138, 0139, 0438, 0439, 1138, 1149, 1217, 1345.	57	692086	Spring-Rewind Starter		
28	807621	Pin-Piston (Standard)	50	690754	Manifold-Intake	57A	492194	Spring-Rewind Starter		
29	807900S	Rod-Connecting (Standard) ----- Note ----- 807803 Rod- Connecting (.020" Undersize)	50A	692124	Manifold-Intake Used on Type No(s). 1279, 1381, 1409, 1410.	58	66574	Rope-Starter (Cut To Required Length)		
32	690698	Screw (Connecting Rod)				58A	695002	Rope-Starter (Cut To Required Length)		
33	807681	Valve-Exhaust				59	805957	Insert-Grip		
34	807680	Valve-Intake				60	808167	Grip-Starter Rope		
35	692084	Spring-Valve (Intake)				60A	490652	Grip-Starter Rope		
						65	691982	Screw (Rewind Starter)		
						65A	841233	Screw (Rewind Starter) (Used After Code Date 03120900).		
						73	494439	Screen-Rotating (Flush)		
						73B	690478	Screen-Rotating		
						74	691655	Screw (Rotating Screen)		
						74A	691647	Screw (Rotating Screen)		
						75	691490	Washer (Flywheel)		
						77	690819	Motor-Servo		
						78	690688	Screw (Flywheel Guard)		

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
91	809208	Body- Upper Carburetor ----- Note ----- 808964 Body- Upper Carburetor Used on Type No(s). 1314, 1319, 1320, 1326, 1409. 808980 Body- Upper Carburetor Used on Type No(s). 1381, 1410.	117B	690862	Jet-Main (Standard) ----- Note ----- 806859 Jet-Main (Standard) Used on Type No(s). 1320, 1409. 690741 Jet-Main (Standard) Used on Type No(s). 1236, 1311, 1331. 690880 Jet-Main (Standard) Used on Type No(s). 1326.	118A	807012	Jet-Main (High Altitude) (5,000-7,500 Feet) Used on Type No(s). 1381, 1410.
94	808257	Kit-Idle Mixture				119	690720	Screw (Upper To Lower Carburetor Body) ----- Note ----- 842761 Screw (Upper To Lower Carburetor Body) Used on Type No(s). 1314, 1319, 1348.
95	690718	Screw (Throttle Valve)				121	809022	Kit- Carburetor Overhaul
97	809007	Shaft-Throttle (Used After Code Date 00071100). ----- Note ----- 807720 Shaft-Throttle (Used Before Code Date 00071200). 841498 Shaft-Throttle Used on Type No(s). 1326.				121A	809021	Kit- Carburetor Overhaul Used on Type No(s). 1023, 1027, 1028, 1030, 1033, 1034, 1049, 1057, 1068, 1095, 1116, 1130, 1134, 1138, 1140, 1145, 1149, 1169, 1171, 1172, 1194, 1214, 1223, 1231, 1236, 1237, 1238, 1251, 1255, 1258, 1275, 1276, 1277, 1285, 1298, 1299, 1300, 1303, 1306, 1311, 1312, 1313, 1318, 1322, 1323, 1327, 1330, 1331, 1338, 1341, 1343, 1345, 1368, 1408, 1420, 1425, 1427, 1429, 1434, 1435, 1439, 1440, 1450.
97A	808973	Shaft-Throttle Used on Type No(s). 1408.	118	842311	Jet-Main (High Altitude) ----- Note ----- 807114 Jet-Main (High Altitude) Used on Type No(s). 1320, 1409. 842836 Jet-Main (High Altitude) (5000 Feet) Used on Type No(s). 1314, 1319. 842841 Jet-Main (High Altitude) (5000 Feet) Used on Type No(s). 1348.			
97D	809095	Shaft-Throttle Used on Type No(s). 1320, 1381, 1409, 1410.						
98	808177	Kit-Idle Speed ----- Note ----- 807923 Kit-Idle Speed Used on Type No(s). 1331.				121F	809023	Kit- Carburetor Overhaul 842878 Kit- Carburetor Overhaul Used on Type No(s). 1409, 1410, 1413.
98A	808981	Kit-Idle Speed Used on Type No(s). 1408.				122	690691	Spacer-Carburetor
102A	692077	Gasket-Carburetor Body						
104	690723	Pin-Float Hinge						
105A	805620	Valve-Float Needle (Gravity Feed)						
108A	690719	Valve-Choke						
109A	808962	Shaft-Choke Used on Type No(s). 1314, 1319, 1320, 1326, 1409.						
109B	809096	Shaft-Choke						
110	806861	Washer (Choke Shaft)						

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
125B	809011	Carburetor (Pump Feed Without Solenoid) ----- Note ----- 809016 Carburetor (Pump Feed Without Solenoid) Used on Type No(s). 0393, 1182, 1236, 1311, 1331. 809013 Carburetor (Gravity Feed Without Solenoid) Used on Type No(s). 1008, 1012, 1017, 1021, 1023, 1025, 1027, 1028, 1030, 1031, 1033, 1034, 1035, 1036, 1040, 1041, 1047, 1048, 1049, 1054, 1055, 1057, 1058, 1062, 1066, 1068, 1070, 1072, 1073, 1076, 1087, 1094, 1095, 1107, 1111, 1113, 1114, 1116, 1118, 1124, 1130, 1131, 1134, 1138, 1140, 1141, 1144, 1145, 1148, 1149, 1157, 1158, 1159, 1169, 1171, 1172, 1174, 1178, 1181, 1191, 1192, 1194, 1208, 1214, 1217, 1218, 1219, 1223, 1231, 1238, 1240, 1246, 1251, 1255, 1258, 1262, 1267, 1275, 1276, 1277, 1298, 1299, 1300, 1303, 1323, 1327, 1341, 1343, 1345, 1368, 1427, 1434, 1439, 1450. 843130 Carburetor Used on Type No(s). 1326. (Used After Code Date 06072700). 841494 Carburetor Used on Type No(s). 1326. (Used Before Code Date 06072800).				809014 Carburetor (Gravity Feed With Solenoid) Used on Type No(s). 1112, 1210, 1235, 1237, 1285. 808972 Carburetor Used on Type No(s). 1408. 808979 Carburetor Used on Type No(s). 1381, 1410. 843129 Carburetor (Used After Code Date 06093000). Used on Type No(s). 1320, 1409. 809152 Carburetor (Used Before Code Date 06100100). Used on Type No(s). 1320, 1409. 842235 Carburetor Used on Type No(s). 1348. 842107 Carburetor Used on Type No(s). 1314, 1319.				161 691561 Base-Air Cleaner ----- Note ----- 842830 Base-Air Cleaner Used on Type No(s). 0452, 0463, 0468, 0490, 0493, 1131, 1152, 1188, 1190, 1193, 1269, 1291, 1292, 1296, 1297, 1315, 1334, 1335, 1344, 1381, 1410, 1420, 1422, 1428, 1433, 1436, 1437, 1444. 161B 808414 Base-Air Cleaner 163 692081 Gasket-Air Cleaner 163B 692052 Gasket-Air Cleaner ----- Note ----- 841823 Gasket-Air Cleaner Used on Type No(s). 1348. 165 693148 Nut (Ring Gear) 167 692297 Seal-Air Cleaner Nut 171 810056 Nut (Air Cleaner) 182 492317 Bracket-Fuel Tank 182A 690778 Bracket-Fuel Tank 182B 690779 Bracket-Fuel Tank 182C 690780 Bracket-Fuel Tank 182D 690781 Bracket-Fuel Tank 182E 841601 Bracket-Fuel Tank 182F 691520 Bracket-Fuel Tank 182G 841600 Bracket-Fuel Tank 182H 691524 Bracket-Fuel Tank 182J 691525 Bracket-Fuel Tank 187 791745 Line-Fuel (Cut To Required Length) ----- Note ----- 791766 Line-Fuel (Cut To Required Length) Used on Type No(s). 1340, 1344, 1347, 1348, 1381, 1385, 1387, 1420, 1429, 1436, 1444, 1449, 1454. 187A 791801 Line-Fuel (Molded)
			127 690727 Plug-Welch 130A 690726 Valve-Throttle 133A 806961 Float-Carburetor 142A 690725 Nozzle-Carburetor (Standard) ----- Note ----- 842319 Nozzle-Carburetor (Standard) Used on Type No(s). 1314, 1319. 142B 806860 Nozzle-Carburetor (Standard) Used on Type No(s). 1381, 1409, 1410. ----- Note ----- 806987 Nozzle-Carburetor (Standard) Used on Type No(s). 1326.							
			146 691639 Key-Timing 151 841185 Stud (Exhaust Manifold)							

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187B	692107	Line-Fuel		692071	Spring-Governor	209A	690709	Spring-Governor Used on Type No(s).
187C	692106	Line-Fuel						0027, 0036, 0054,
187D	692108	Line-Fuel			Used on Type No(s).			0060, 0061, 0074,
188	692056	Screw (Control Bracket)			0064, 0093, 0132,			0084, 0085, 0092,
					0364, 0393, 0440,			0123, 0133, 0136,
190	692199	Screw (Fuel Tank)			0443, 0482, 0486,			0312, 0313, 0315,
		----- Note -----			1018, 1052, 1064,			0317, 0319, 0321,
		692056 Screw (Fuel Tank)			1093, 1128, 1131,			0325, 0327, 0339,
		Used on Type No(s).			1142, 1143, 1153,			0350, 0354, 0360,
		1338.			1182, 1186, 1220,			0362, 0365, 0366,
					1236, 1272, 1281,			0373, 0374, 0382,
					1290, 1344.			0385, 0391, 0392,
190A	94536	Screw (Fuel Tank)		691508	Spring-Governor			0394, 0397, 0399,
192	807623	Adjuster-Rocker Arm			Used on Type No(s).			0412, 0416, 0417,
197	807163	Screw (Back Plate)			0045, 0345, 0423,			0419, 0420, 0427,
203	690923	Crank-Bell			0446, 0451, 0456,			0428, 0430, 0435,
205	692083	Screw (Bell Crank)			0480, 0497, 1151,			0453, 0458, 0464,
206	691244	Nut-Governor Adjusting			1157, 1170, 1180,			0475, 0476, 0477,
208	691549	Rod-Governor Control (Used After Code Date 96033100).			1197, 1200, 1224,			0481, 0488, 0489,
					1232, 1269, 1282,			0495, 0496, 0501,
					1297, 1316, 1337,			0502, 0505, 0518,
208A	808453	Rod-Governor Control			1412, 1413, 1421,			1012, 1013, 1015,
209	692070	Spring-Governor			1425, 1432, 1434,			1017, 1019, 1021,
		----- Note -----			1443, 1445, 1449.			1025, 1031, 1033,
		691506 Spring-Governor						1049, 1054, 1060,
		Used on Type No(s).			692072	Spring-Governor		1062, 1066, 1073,
		0022, 0028, 0036,				Used on Type No(s).		1074, 1087, 1094,
		0037, 0042, 0044,				0411, 0479, 1125,		1111, 1112, 1114,
		0052, 0078, 0129,				1179, 1227, 1242,		1116, 1118, 1119,
		0130, 0342, 0344,				1247, 1296, 1308,		1120, 1127, 1129,
		0352, 0378, 0396,				1315, 1428, 1436,		1131, 1133, 1141,
		0415, 0425, 0450,				1437.		1158, 1159, 1164,
		0462, 0494, 0498,			690716	Spring-Governor		1167, 1168, 1175,
		1042, 1044, 1078,				Used on Type No(s).		1176, 1177, 1181,
		1162, 1194, 1198,				0369, 0386, 0433,		1189, 1195, 1196,
		1257, 1378.				1069, 1086, 1095,		1205, 1208, 1218,
		691507 Spring-Governor				1210, 1237, 1278,		1231, 1250, 1251,
		Used on Type No(s).				1348, 1429.		1262, 1403.
		0326, 1026, 1270,			805630	Spring-Governor		
		1314, 1319, 1326,				Used on Type No(s).		210
		1330, 1426, 1454.				0129, 0130, 0138,		691370
		690710 Spring-Governor				0139, 0438, 0439,		Strainer-Fuel
		Used on Type No(s).				1138, 1149, 1217.		
		0493, 1193, 1291,				806869		211
		1334.						692069
						Spring-Governor		Spring-Governed Idle
						Used on Type No(s).		----- Note -----
						1408.		691505 Spring-Governed Idle
								Used on Type No(s).
								0326, 0369, 0386,
								0433, 1026, 1086,
								1278, 1348.
								806868 Spring-Governed Idle
								Used on Type No(s).
								1408.

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
211A	692068	Spring-Governed Idle ----- Note ----- 690707 Spring-Governed Idle Used on Type No(s). 0027, 0036, 0054, 0060, 0061, 0074, 0084, 0085, 0092, 0123, 0133, 0136, 0312, 0313, 0315, 0317, 0319, 0321, 0325, 0327, 0339, 0350, 0354, 0360, 0362, 0365, 0366, 0373, 0374, 0382, 0385, 0391, 0392, 0394, 0397, 0399, 0412, 0416, 0417, 0419, 0420, 0427, 0428, 0430, 0435, 0453, 0458, 0464, 0475, 0476, 0477, 0481, 0488, 0489, 0495, 0496, 0501, 0502, 0505, 0518, 1012, 1013, 1015, 1017, 1019, 1021, 1025, 1031, 1033, 1049, 1054, 1060, 1062, 1066, 1073, 1074, 1087, 1094, 1111, 1112, 1114, 1116, 1118, 1119, 1120, 1127, 1129, 1131, 1133, 1141, 1158, 1159, 1164, 1167, 1168, 1175, 1176, 1177, 1181, 1189, 1195, 1196, 1205, 1208, 1218, 1231, 1250, 1251, 1262, 1403. 691553 Spring-Governed Idle Used on Type No(s). 1179, 1186, 1236, 1269, 1272, 1311, 1314, 1319, 1331, 1406.	212	690712	Link-Throttle	216	690705	Link-Choke
			212A	691519	Link-Throttle	217	806862	Spring-Choke Return
			215	841183	Guide-Air (Used After Code Date 93072200). ----- Note ----- 807656 Guide-Air (Used Before Code Date 93072300). 841182 Guide-Air Used on Type No(s). 1252, 1343, 1344, 1345, 1346, 1444, 1450. 841316 Guide-Air (Cylinder #2) Used on Type No(s). 1454.	222	808454	Bracket-Control (Used With Control Lever And/Or Wire With "Z" Formed End) (Used After Code Date 94113000). 222A 690918 Bracket-Control (Used With Control Lever And/Or Wire With "L" Formed End) ----- Note ----- 691570 Bracket-Control Used on Type No(s). 0414, 0478, 1114, 1178, 1314, 1319, 1326, 1348.
			215A	806544	Guide-Air	226	692075	Rod-Hand Choke
			215B	841317	Guide-Air (Cylinder #1)	227	690236	Lever-Governor Control
			215C	692805	Guide-Air (Used After Code Date 93072200). ----- Note ----- 807869 Guide-Air (Used After Code Date 90111600 and Before Code Date 93072300). 807657 Guide-Air (Used Before Code Date 90111700).	231	690718	Screw (Choke Valve)
						232	692073	Spring-Governor Link
						234	691723	Clip-Control Rod
						239	690233	Switch-Oil Pressure (Lower Pressure Switch) ----- Note ----- 491657s Switch-Oil Pressure (Normally Closed)
						240	298090S	Filter-Fuel
						240A	691035	Filter-Fuel
						240B	808116S	Filter-Fuel
						255	690721	Bushing-Choke Shaft
						262	692083	Screw (Rod Bracket)
						265	691024	Clamp-Casing
						267	692083	Screw (Casing Clamp)
						268	691025	Casing-Control Wire (Cut To Required Length)
						269	691026	Wire-Control (Cut To Required Length)

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
270	691027	Nut (Control Wire Casing)	300		Muffler (For Replacement Muffler, Use 692099 , Reference 300D)	309	691564	Motor-Starter (Steel Ring Gear Only)
271	692541	Lever-Control (Cable Wire With "Z" Formed End)	300A	807742	Muffler (Cylinder 2) (Side Outlet)	309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)
271A	692105	Lever-Control (Cable Wire With "L" Formed End)	300B	498984S	Muffler (Super Lo Tone)	309B	499521	Motor-Starter (For Aluminum Ring Gear Only)
271B	691028	Lever-Control	300C	807752	Muffler (Low Mount)	309C		Motor-Starter (For Aluminum Ring Gear Only)
273	690681	Seal-O Ring (Oil Pump)	300D	692099	Muffler (Low Mount)	309D	808817	Motor-Starter Used on Type No(s). 1340, 1341.
276	690704	Washer-Sealing (Cylinder Head)	300E	690906	Muffler (Cylinder #1) (Side Outlet) (Starter Motor Side)	310	496880	Screw (Starter Motor) (4 1/4" Long)
276A	807085	Washer-Sealing (Used After Code Date 01120200). ----- Note ----- 691766 Washer- Sealing (Cylinder Head) (Used Before Code Date 01120300).	300F	690931	Muffler (Hi Mount) (Starter Side Exit)	310A	690323	Screw (Starter Motor) (4 7/16" Long)
276B	690724	Washer-Sealing (Carburetor Plug)	300H	807831	Muffler (Cylinder #1) (Side Outlet) (Starter Motor Side)	310B	691263	Screw (Starter Motor) (4 3/16" Long)
276C	806137	Washer-Sealing (Solenoid) Used on Type No(s). 1236, 1252, 1311, 1331, 1334, 1347, 1387, 1409, 1436, 1445, 1454.	300J	807799	Muffler (Cylinder #2) (Side Outlet) (Oil Filter Side)	310C	692329	Screw (Starter Motor) (5-3/8" Long)
276F	693497	Washer-Sealing	300L	808380	Muffler (Cylinder #1) (Side Outlet) (Starter Motor Side)	311	496887	Brush Set
278	842122	Washer (Governor Control Lever)	304	808055	Housing-Blower (Red) (Without Weld Nut) (For Metal Air Cleaner)	311A	497608	Brush Set
280	691526	Bracket-Rod	304A	808408	Housing-Blower (Black) (Without Weld Nut) (For Plastic Air Cleaner Base)	311B	490311	Brush Set (For 4 9/16" Housing Length)
281	690742	Panel-Control	305	841233	Screw (Blower Housing)	318	806870	Screw (Mounting Bracket)
282	692083	Screw (Control Lever)			----- Note ----- 692056 Screw (Blower Housing) (14 mm Long) 807163 Screw (Blower Housing) (10mm Long)	318A	691982	Screw (Mounting Bracket)
287	806660	Screw (Dipstick Tube) (Special)	305B	692062	Screw (Blower Housing) (18mm Long)	318B	690932	Screw (Mounting Bracket)
287A	692062	Screw (Dipstick Tube)				321	690379	Fan-Booster
						322	841233	Screw (Cylinder Head Cover)
						322A	692067	Screw (Cylinder Head Cover)
						331	691075	Washer (Booster Fan)
						332	690887	Nut (Flywheel)
						333	492341	Armature-Magneto
						334	692066	Screw (Magneto Armature)

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
456	691529	Plate-Pawl Friction	503	691532	Strap-Starter	525	693174	Tube-Dipstick (Used After Code Date 98053100).
456A	224228	Plate-Pawl Friction	505	690238	Nut (Governor Control Lever)	525A	693173	Tube-Dipstick (Used After Code Date 98053100).
459	808166	Pawl-Ratchet	506	690677	Screw (Carburetor Cover)			Used on Type No(s). 1131, 1147, 1197, 1233, 1270, 1279, 1311, 1314, 1319, 1320, 1326, 1344, 1409.
459A	492431	Pawl-Ratchet	507	691972	Insulator	525C	690897	Tube-Dipstick (Used Before Code Date 98060100).
467	691985	Knob-Air Cleaner	507A	281223	Insulator			----- Note ----- 690907 Tube-Dipstick (Used Before Code Date 98060100). Used on Type No(s). 0310, 0446, 0447, 0497, 1147, 1197, 1233, 1270, 1279, 1296.
467A	690895	Knob-Air Cleaner	510	496881	Drive-Starter (Used With Steel Ring Gear)	526	692067	Screw (Regulator) (10-16 Amp Regulated)
467B	691668	Knob-Air Cleaner	510A	696541	Drive-Starter	526A	690717	Screw (Regulator) (5 To 9 Amp Regulated) (Used After Code Date 90021100).
468	690690	Seal-O Ring (Oil Pump Screen)	510B	696540	Drive-Starter (4 3/8" Housing Length)			----- Note ----- 810084 Screw (Regulator) (5 To 9 Amp Regulated) (Used Before Code Date 90021200).
474B	696459	Alternator Used on Type No(s). 1293, 1346, 1412, 1421, 1425, 1432, 1434.	513	692024	Clutch-Drive	526B	691547	Screw (Regulator)(10-16 Amp Regulated) Used on Type No(s). 1041, 1057, 1110, 1236, 1278, 1295, 1322, 1331, 1348, 1384.
474C	696457	Alternator (5 To 9 Amp Regulated) ----- Note ----- 696458 Alternator Used on Type No(s). 1236, 1252, 1344, 1347, 1387, 1436, 1444.	515	691528	Spring-Pawl	527	690423	Clamp-Tube
474D	696579	Alternator (20 Amp) Used on Type No(s). 1057, 1110, 1236, 1278, 1295, 1306, 1311, 1322, 1331, 1348, 1384, 1416.	520	691084	Terminal-Ground	529	690744	Grommet
479	807084	Screw (Oil Pump Screen)	520A	809077	Terminal-Ground (Ignition Shutoff)	529A	691527	Grommet
493	691518	Bracket-Mounting	523	692100	Dipstick (Standard) (Used Before Code Date 98060100).	532	691115	Nut (Mounting Bracket)
493A	691177	Bracket-Mounting (Regulator)	523A	693175	Dipstick (Special) (Used After Code Date 98053100).			
493B	691503	Bracket-Mounting	524	693172	Seal-Dipstick Tube (Used After Code Date 98053100). ----- Note ----- 281370S Seal-Dipstick Tube (Used Before Code Date 98060100).			
500	691086	Washer (Key Switch)						
501	691185	Regulator (10 Amp Regulator)						
501A	691188	Regulator (5 To 9 Amp Regulated)						
501B	691573	Regulator (20 Amp) Used on Type No(s). 1041, 1057, 1110, 1236, 1278, 1295, 1322, 1331, 1348, 1384.						

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
544		Armature-Starter (Service With 691564 Starter Motor Only)	608	692102	Starter-Rewind (Used After Code Date 93072500).	633	806131	Seal-Choke/Throttle Shaft
544A		Armature-Starter (Serviced By 499521 Starter Motor Only)	608A	808152	Starter-Rewind (Used Before Code Date 93072600).	633B	690722	Seal-Choke/Throttle Shaft
544C	490309	Armature-Starter			----- Note -----	633C	807003	Seal-Choke/Throttle Shaft
552	690701	Bushing-Governor Crank (Output End)			494926 Starter- Rewind (Used Before Code Date 93072600).			Used on Type No(s). 1320, 1381, 1409, 1410.
552A	806686	Bushing- Governor Crank (Flanged)			Used on Type No(s). 0448.	635	692076	Boot-Spark Plug
555	692067	Screw (Starter Solenoid)	613	691902	Screw (Muffler)	637	806999	Washer (Throttle Shaft)
561	690713	Nut (Control Lever)	613A	692067	Screw (Muffler)	637A	807000	Washer (Throttle Shaft)
562	690239	Bolt (Governor Control Lever)	615	691550	Retainer-Governor Shaft	638	691551	Washer (Cylinder Head Cover) (Lock Tooth)
563	691982	Screw (Debris Screen Guard)	616	806685	Crank-Governor (Used After Code Date 99072000).			(Used Before Code Date 03110100).
565	690682	Stud (Oil Filter Adapter)	616A	690899	Crank-Governor (Used Before Code Date 99072100).	638A	690706	Washer (Cylinder Head Cover) (Spring)
572	690686	Baffle-Breather (Used Before Code Date 04060100).	620	494052	Panel-Speed Control	643	692079	Retainer-Air Filter
573	841310	Plate-Back (Black)	628	806660	Screw (Fuel Pump Bracket)	643A	690447	Retainer-Air Filter
		----- Note -----	629	806717	Spring-Throttle Return	643B	691730	Retainer-Air Filter
		841127 Plate-Back (Black)	629A	806716	Spring-Throttle Return	650	841233	Screw (Oil Deflector)
		Used on Type No(s). 1340, 1341.			----- Note -----			----- Note -----
577	690795	Cable-Starter			807004 Spring- Throttle Return (Used After Code Date 01032800).	663	692083	Screw (Control Panel)
578	692306	Wire Assembly			Used on Type No(s). 1320, 1381, 1409, 1410.	664	691087	Nut (Key Switch)
578A	692319	Wire Assembly (Ignition Coil)			806863 Spring- Throttle Return (Used Before Code Date 01032900).	668A	691500	Spacer
578B	691377	Wire Assembly			Used on Type No(s). 1314, 1381, 1409, 1410.	674	692056	Screw (Fuel Tank Bracket)
578C	690809	Wire Assembly				674A	692062	Screw (Fuel Tank Bracket)
578D	692961	Wire Assembly				676	393761	Deflector-Muffler (Side Out)
578E	807593	Wire Assembly (Cylinder 2)				676A	397630	Deflector-Muffler (Louvered)
578F	691999	Wire Assembly (Ignition Coil)				676B	396903	Deflector-Muffler (Direct Out)
596	691492	Screw (Oil Pump)	629B	692088	Spring-Throttle Return Used on Type No(s). 0404, 0405, 1104, 1105, 1108, 1283.	676C	495518	Deflector-Muffler
597	690876	Screw (Pawl Friction Plate)				676D	808394	Deflector-Muffler
597A	94463	Screw (Pawl Friction Plate)						
598	807625	Shim-End Play (Crankshaft)						
601	691038	Clamp-Hose						
601A	805813	Clamp-Hose						
601B	791850	Clamp-Hose						
601C	691522	Clamp-Hose						

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
677	810079	Screw (Muffler Deflector)	728	691514	Screw (Heat Shield)	803	690854	Housing-Starter
677A	690688	Screw (Muffler Deflector)	728B	805704	Screw (Heat Shield)	803A	693547	Housing-Starter
677B	690661	Screw (Muffler Deflector)	729	690586	Clip-Wire	803B		Housing-Starter (Serviced By 499521 Starter Motor Only)
681	808798	Kit-Needle/Seat	732	690688	Screw (Starter Drive Cover)	803C	494205	Housing-Starter (For 4 3/8" Housing Length)
683	691029	Nut (Starter Solenoid)	732A	841233	Screw (Starter Drive Cover) (Used After Code Date 03120900).			----- Note ----- 398892 Housing- Starter (For 4 9/16" Housing Length)
689	691272	Spring-Friction	737	690679	Screw (Oil Filter Adapter)	807	805557	Spacer-Throttle
689A	262564	Spring-Friction	739	690451	Clip-Debris	812	692055	Nut (Rocker Cover) (Used Before Code Date 01120300).
691	690680	Seal-Governor Shaft	741	691530	Gear-Timing	813	690635	Clamp
695	693109	Screw (Ring Gear)	742	807001	Retainer-E Ring	816	690706	Washer (Oil Filter Adapter)
697	692062	Screw (Drive Cap)	763	808190	Kit-Electric Starter (For 12 Volt Gear Drive) (Aluminum Ring Gear) Used on Type No(s). 1232, 1293.	819	690297	Screw (Muffler Bracket) (Used After Code Date 97012300).
703	94484	Clip	773	690875	Retainer			----- Note ----- 692198 Screw (Muffler Bracket) (Used Before Code Date 97012400).
706	805484	Washer (Breather Assembly) (Used Before Code Date 90111500).	774	692067	Screw (Stop Wire)	819A	690943	Screw (Muffler Bracket) (16mm Long)
710	807689	Cover-Oil Filter	783	695708	Gear-Pinion (Services Aluminum Ring Gear Only)			----- Note ----- 692056 Screw (Muffler Bracket) (14mm Long)
711A	691492	Screw (Carburetor Shield)	788	691559	Bracket-Fuel Pump	819C	692537	Screw (Muffler Bracket)
		----- Note ----- 807084 Screw (Carburetor Shield) Used on Type No(s). 1348.	789	691996	Harness-Wiring			----- Note ----- 692067 Screw (Muffler Bracket) (12 mm Long)
711B	690699	Screw (Carburetor Shield)			691578 Harness- Wiring Used on Type No(s). 1041, 1057, 1110, 1278, 1295, 1306, 1322, 1331, 1348, 1384, 1416.	819D	692062	Screw (Muffler Bracket)
718	806469	Pin-Locating			841318 Harness- Wiring Used on Type No(s). 1340, 1341.	830	809157	Stud-Rocker Arm (Used After Code Date 96033100).
718A	805102	Pin-Locating (Used Before Code Date 90091100).	797	691029	Nut (Brush Retainer)			----- Note ----- 691497 Stud- Rocker Arm (Used Before Code Date 96040100).
718B	690740	Pin-Locating	797A	693167	Nut (Brush Retainer)	832	691571	Guard-Muffler
725	280866	Shield-Heat	801	808778	Cap-Drive			
725B	805844	Shield-Heat	801B	691283	Cap-Drive			
		----- Note ----- 691498 Shield-Heat Used on Type No(s). 1172, 1235, 1435, 1440, 1442.	802	496813	Cap-End			
725C	806102	Shield-Heat	802A	691286	Cap-End			
725D	805702	Shield-Heat						
726A	807805	Gear-Ring (Aluminum)						
727	841313	Cover-Starter Drive (Black)						

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
833	841233	Screw (Air Cleaner Mounting Strap/Stud)	868	691963	Seal-Valve	918	393815	Hose-Vacuum (Rocker Cover To Impulse Pump)
833A	690872	Screw (Air Cleaner Mounting Strap/Stud) (Used After Code Date 97103100).	871	692057	Bushing-Valve Guide			(Cut To Required Length)
833B	691593	Screw (Air Cleaner Mounting Strap/Stud)	875	690894	Base-Air Cleaner	920	691656	Solenoid-Starter
836	691514	Screw (Muffler Guard)	876	696539	Kit-Pinion Spring	920A	825418	Solenoid-Starter Used on Type No(s). 1340, 1341.
836A	692067	Screw (Muffler Guard)	877	393456	Wire/Connector-Alternator	927	691116	Screw (Electronic Governor Module)
837	808085	Spacer-Muffler	877B	393537	Wire/Connector-Alternator	947	842239	Solenoid-Fuel Used on Type No(s). 1314, 1319, 1348.
840	842828	Kit-Panel (Used After Code Date 05011800). ----- Note ----- 692096 Kit-Panel (Used Before Code Date 05011900).	877C	399916	Wire/Connector-Alternator	947A	692094	Solenoid-Fuel
842	690611	Seal-O Ring (Dipstick Tube)	878	398661	Harness-Alternator (Dual Circuit)	949	690475	Guard-Debris Screen
843	691322	Sleeve-Lever	878B	691362	Harness-Alternator	949A	808226	Guard-Debris Screen
849	691088	Screw (Stub Shaft)	879	842829	Cover-Carburetor (Used After Code Date 06011900)	955A	807723	Plug-Carburetor (Jet) ----- Note ----- 808176 Plug-Carburetor Used on Type No(s). 1314, 1319, 1348.
849A	690342	Screw (Stub Shaft)	882	692074	Flange-Exhaust	957	491367S	Cap-Fuel Tank
851	493880S	Terminal-Spark Plug	883	691613	Gasket-Exhaust	957A	493988S	Cap-Fuel Tank
862	692153	Strap/Stud-Air Cleaner Mounting	884	690898	Clamp-Muffler	958	698182	Valve-Fuel Shut Off
862C	807563	Strap/Stud-Air Cleaner Mounting	884A	691956	Clamp-Muffler	958A	698183	Valve-Fuel Shut Off Used on Type No(s). 1293, 1346, 1412, 1413, 1421, 1432, 1449.
862D	691565	Strap/Stud-Air Cleaner Mounting	892	692318	Switch-Key	958B	692008	Valve-Fuel Shut Off
862E	492133	Strap/Stud-Air Cleaner Mounting	893	820805	Nut (Starter Solenoid) Used on Type No(s). 1340, 1341.	967A	272490S	Filter-Pre Cleaner
863	691513	Bracket-Muffler (Cylinder 2 Side)	896	691641	Pin-Drive Retainer	967B	805267S	Filter-Pre Cleaner
863A	690756	Bracket-Muffler (Cylinder 2 Side)	899	691077	Washer (Starter Solenoid)	967C	271794S	Filter-Pre Cleaner
863B	805610	Bracket-Muffler				968A	699959	Cover-Air Cleaner
865	841312	Cover-Air Guide				968B	690694	Cover-Air Cleaner ----- Note ----- 841822 Cover-Air Cleaner Used on Type No(s). 1348.
865A	690908	Cover-Air Guide Used on Type No(s). 0310, 0446, 0447, 0497, 1147, 1197, 1270, 1279. ----- Note ----- 841319 Cover-Air Guide Used on Type No(s). 1029, 1154, 1180, 1216, 1222, 1454.				968C	691910	Cover-Air Cleaner
						968E	691334	Cover-Air Cleaner
						971	807084	Screw (Air Cleaner Base to Carburetor)
						971A	690699	Screw (Air Cleaner Base to Carburetor)
						971B	692537	Screw (Air Cleaner Base to Carburetor)

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
972	492369	Tank-Fuel (7 Quart)	1027	842921	Filter-Oil	1083A	690958	Nut (End Cap)
972A	690663	Tank-Fuel (9 Quart)	1028	808235	Adapter-Oil Filter	1085	809093	Module-Ignition
987	807002	Seal-Throttle Shaft	----- Note -----			1090	691293	Retainer-Brush
987A	806864	Seal-Throttle Shaft	808033		Adapter-Oil Filter	1091	691516	Cap-Limiter
988	692063	Gasket-Oil Adapter			(For Horizontal Mounted Oil Filter)	1095B	842723	Gasket Set-Valve (Used After Code Date 01120200).
988A	690687	Gasket-Oil Adapter			Used on Type No(s). 1030, 1041, 1042, 1046, 1047, 1048, 1052, 1057, 1068, 1086, 1093, 1104, 1108, 1125, 1142, 1149, 1165, 1189, 1193, 1194, 1198, 1220, 1224, 1227, 1228, 1242, 1247, 1252, 1257, 1262, 1267, 1276, 1278, 1279, 1283, 1285, 1291, 1295, 1297, 1312, 1313, 1315, 1330, 1334, 1345, 1347, 1368, 1437, 1439.	----- Note -----		
990	691959	Key Set	1029	807323	Arm-Rocker	1100	791959	Pivot-Rocker Arm
994	392390	Arrestor-Spark	1030	691496	Support-Rocker Arm	1119	691552	Screw (Alternator)
996	691577	Shield-Carburetor	1031	690693	Shaft-Rocker Arm	1122	93410	Screw (Blower Housing Adapter)
996C	690696	Shield-Carburetor	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)	1135	806497	Washer (Fuel Pump Bracket)
		----- Note -----	1038	492374	Rod-Fuel Shut Off	1148	94504	Screw (Clip)
		841826 Shield-Carburetor Used on Type No(s). 1348.	1038A	691567	Rod-Fuel Shut Off	1176	842067	Nut (Exhaust Manifold)
1004	690743	Duct-Air	1044	692056	Screw (Flywheel)	1231	692067	Screw (Ignition Module)
1004B	692538	Duct-Air (Used With Plastic Air Cleaner Base)	1046	692082	Plug-Blower Housing	1254	807084	Screw (Rocker Cover Stud) (Used After Code Date 01120200).
1009	806474	Screw (Starter Motor)	1047	841580	Shaft-Stub	1319	794467	Label-Warning
1012	690592	Retainer-Link	1048	690669	Module-Electronic Governor (Used After Code Date 98102700).	1330	272144	Repair Manual
1012A	691521	Retainer-Link	1051	691124	Ring-Retaining	1344	841129	Cable-Choke Used on Type No(s). 1385.
1017	690900	Screen-Oil Pump	1051A	691265	Ring-Retaining	1346	492031	Valve-Oil Drain Shut Off Used on Type No(s). 1334, 1443, 1444, 1445.
1022	806039S	Gasket-Rocker Cover	1054	280275	Tie-Cable			
1023	690758	Cover-Rocker (Used After Code Date 03103100).	1054A	710349	Tie-Cable			
1023B	691494	Cover-Rocker (Used Before Code Date 03110100).	1058	276343	Operator's Manual			
1023C	690910	Cover-Rocker	1059	698516	Kit-Screw/Washer			
1023D	691558	Cover-Rocker	1083	691626	Nut (End Cap)			
1023E	691531	Cover-Rocker						
1024	693185	Pump-Oil						
1025	690689	Spool-Governor						
1026	691836	Rod-Push (Steel)						
		----- Note -----						
		691758 Rod-Push (Aluminum)						

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

