

Remove the front fender and skids from the 30" mower deck.

Fasten the chain guard weldment to the deck with the 5/16-24x.875 hex bolts, flat washers and 2/16-24 lock nuts as shown in the illustration in Section 2.

Fasten the chain guard slide to the deck and chain guard weldment with the 5/16-24x.875 hex bolts and lock washers as shown in the illustration in Section 2.

SECTION 2

ILLUSTRATED PARTS AND PARTS LIST



CHAIN GUARD

DESCRIPTION	QTY	PART NO.	ITEM NO.
Weldment, Chain Guard	1	15260	1
Nut, Lock 5/16-24	6	150109	2
Flat, Hex 5/16-24x.875	6	181293	3
Washer, Lock 5/16 Imperial Tooth	6	138838	4
Washer, Flat, 408x 5/16x .035	2	150364	5
Bolt, Hex 5/16-24x.875	5	181556	6
Chain, 3 Link	25	13884	7
Chain, 2 Link	4	13885	8
Slide, Chain Guard	2	21366	9


SECTION 1

INSTALLATION INSTRUCTIONS

1. Remove the front fender and skids from the 30" mower deck.
2. Fasten the chain guard weldment to the deck with the 5/16-24x.875 hex bolts, flat washers and 5/16-24 lock nuts as shown in the illustration in Section 2.
3. Fasten the chain guard skids to the deck and chain guard weldment with the 5/16-24x.625 hex bolts and lock washers as shown in the illustration in Section 2.

SECTION 2

ILLUSTRATED PARTS AND PARTS LIST

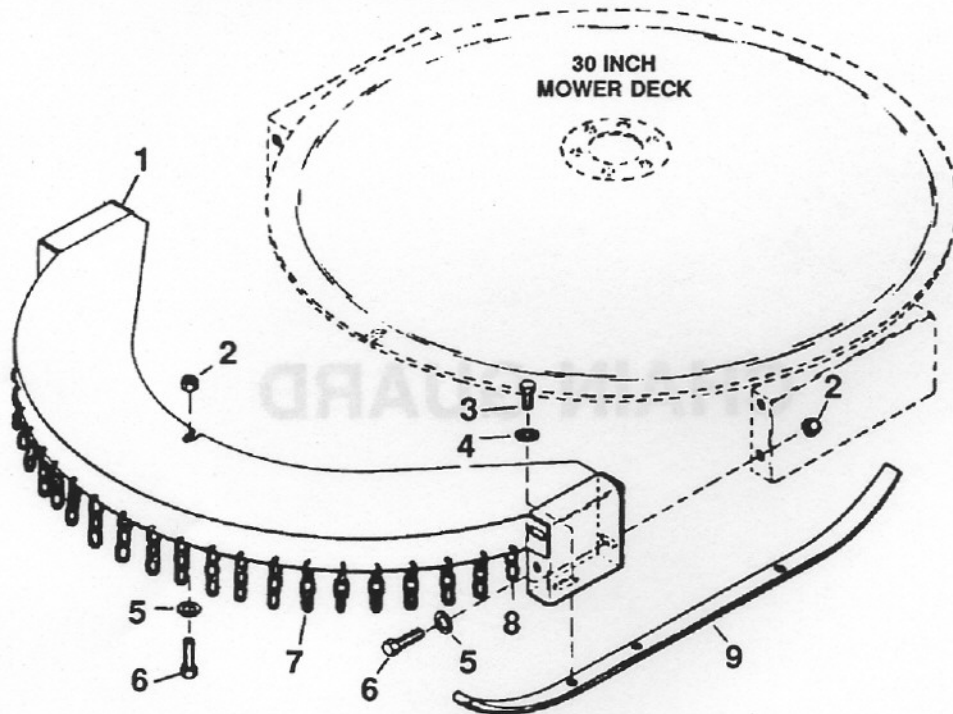

ITEM NO.	PART NO.	QTY.	DESCRIPTION
1	10260	1	Weldment, Chain Guard
2	190139	5	Nut, Lock 5/16-24
3	181593	6	Bolt, Hex 5/16-24x.625
4	138538	6	Washer, Lock 5/16 Internal Tooth
5	120394	5	Washer, Flat .406x.812x.065
6	181596	5	Bolt, Hex 5/16-24x.875
7	13584	22	Chain, 3 Link
8	13585	4	Chain, 2 Link
9	21395	2	Skid, Chain Guard